

User Guide



SANYO

KATANA™

Table of Contents

1. The Basics	2
Front View of Your Phone	2
Viewing the Display Screen	5
Turning Your Phone ON and OFF	7
Using the Battery	8
Displaying Your Phone Number	10
Making and Answering Calls	10
Holding Your Phone	10
Making Calls	11
Dialing Options	12
Answering Calls	12
Using the Speakerphone	15
Changing the Ringer Volume	15
Adjusting Volume During a Conversation	16
Muting a Call	16
Displaying the Missed Call Notification	16
Calling Emergency Numbers	17
In-Call Options	18
Transfer Audio	19
End-of-Call Options	19
Saving a Phone Number	20
Finding a Phone Number	20
Dialing and Saving Phone Numbers With Pauses	21
Dialing From the Contacts Directory	22
Using Speed Dialing	22
Using Abbreviated Dialing	23
Selecting a Character Input Mode	25
Entering Characters Using T9 Text Input	26
Adding a Word to the T9 Database	26
Entering Characters Using the Keypad	28
2. Your Phone's Settings	29
Sound Settings	29
Selecting Ringer Types for Voice Calls	29
Selecting Ringer Types for Voicemail, Messaging or Calendar/Alarm	29
Selecting Vibrate Pattern	30
Selecting Ringer Types for Messaging	30
Selecting a Tone Length	30
Setting a Start-up/Power-off Tone	31
Using Voice Prompt	31
Setting Up Key Press Echo	31
Adjusting the Phone's Volume Settings	32

Alert Notification	33
Silence All	34
Display Settings	35
Changing the Greeting	35
Changing the Backlight Time Length	35
Changing the Display Screen	36
Changing the Display for Incoming Calls	36
Changing the Phone's Menu Style	36
Changing the Clock/Calendar Display for Standby Mode	37
Changing the Screen Saver	37
Changing the Font Size	38
Setting Return to Standby Mode	38
Sleep Mode	39
Power Save Mode	39
Location Settings	40
Location Services	40
Your Privacy	40
Settings	41
Messaging Settings	42
Setting Message Notification	42
Setting Push Options	42
Editing Canned Messages	42
Setting Your Callback Number	43
Setting Your Signature	44
Setting Drafts Alert	44
TTY Use	45
Airplane Mode	46
Phone Setup Options	47
My Favourites	47
Auto Answer Mode	48
Changing the Menu Language	48
Setting the Current Time	48
Setting Any Key Answer	49
Setting the Open/Close Flip Option	49
Setting the Side Key Guard	50
Setting the Text Entry	51
Setting Abbreviated Dialing	52
Headset Mode	53
3. Security	54
Accessing the Security Menu	54
Locking Your Phone	54
Unlocking Your Phone	54
Locking the Pictures Menu	55

Lock Services	55
Changing the Lock Code	55
Calling in Lock Mode	55
Restricting Calls	56
Using Special Numbers	56
Erasing Phone Content	57
Resetting Your Picture Messaging Account	57
Resetting Your Phone	58
Resetting the Browser	58
Resetting Favourites	58
Resetting Default Settings	58
4. Roaming	59
Understanding Roaming	59
Setting Your Phone's Roam Mode	60
5. Menu Navigation	61
Viewing the Menus	61
6. Managing Call History	63
Viewing History	63
Call History Options	63
Making a Call From Call History	64
Saving a Phone Number From Call History	64
Prepending a Phone Number From Call History	65
Erasing Call History	65
7. Contacts Directory	66
Displaying the Contacts List	66
Adding a New Contacts Entry	66
Assigning a Group Entry	67
Finding Contacts List Entries	68
Contacts List Options	69
Contacts Entry Options	69
Editing a Contacts Entry	70
Erasing a Contacts Entry From the List	70
Assigning Speed Dial Numbers	71
Selecting a Ringer/Image Type for an Entry	72
Secret Contacts Entries	73
Dialing Services	73
8. Personal Organizer	74
Managing Schedules	74
Adding an Event to the Scheduler	74
Event Alerts	75
Event Alert Menu	75
Viewing Events	76

Adding a Call Alarm to the Scheduler	76
Call Alarm Menu	77
Erasing a Day's Event or Call Alarm	77
Viewing a Future/Past Day's Scheduled Events	77
Adding To Do Items	78
Adding a To Do Item to the Schedule	78
Purging All Events, Call Alarms or To Do List Items	79
Displaying Phone Information	79
Finding Icon Definition	80
Displaying the Version Information	80
Displaying Advanced Information	80
Using Your Phone's Tools	81
Setting the Alarm Clock	81
Using the Countdown Timer	82
Using the Calculator	83
Using the World Clock	83
Using the Stop Watch	84

9. Voice Services85

Using Voice-Activated Dialing	85
Programming Voice Tag to Your Phone	86
Voice Tag Options	86
Managing Voice Memos	87
Recording Voice Memos	87
Reviewing Voice Memos	88
Erasing Voice Memos	89
Setting Up Screen Call	90

10. Messaging93

New Messages	93
Displaying Messages	94
Sending a Text Message	95
Creating Folders for Messages	96
Erasing Messages	97
Erasing Selected Messages in All Folders	97

11. Using Your Phone's Camera98

Taking Pictures	98
Creating Your Online Picture Messaging Password	99
Camera Mode Options	100
Selecting Camera Settings	103
Using the Settings & Info Menu	104
Setting Auto Delete	104
Viewing Your Account Information	104
Viewing Your Camera's Status Area Display	105

Storing Pictures	106
In Camera Folder	106
In Camera Folder Options	107
Saved to Phone Folder	109
Sending Pictures	110
Sending Pictures From the In Camera Folder	110
Sending Pictures From Messaging	112
Sending Online Picture Messages	113
Managing Picture Messages Online	114
Using the Online Picture Messaging Web Site	114
Managing Online Pictures From Your Phone	114
Uploading Pictures	115
Downloading Your Online Pictures	115
Accessing Online Picture Options From Your Phone	116

12. Using Bluetooth117

Accessing the Bluetooth Menu	117
Turning Bluetooth On and Off	117
Bluetooth Status Indicators	118
Using the Bluetooth Settings Menu	118
Bluetooth Settings: My Bluetooth Name	118
Bluetooth Settings: My Bluetooth Information	119
Bluetooth Settings: Visibility	119
Bluetooth Settings: Voice Priority	120
Bluetooth Settings: Permissions	120
Bluetooth Profiles	121
Pairing Bluetooth Devices	122
Paired Devices	122
Waiting for Request	122
Using the Trusted Devices Options	123
Sending Data via Bluetooth	124
Sending an Item	124
Sending a Contact	125

13. Service Features126

Using Voicemail	126
Voicemail Notification	126
New Voicemail Message Alerts	126
Displaying Voicemail Details	126
Retrieving Your Voicemail Messages	127
Clearing the Message Icon	127
Editing Your Voicemail Number	127
Responding to Call Waiting	128
Making a Three-Way Call	129
Web	130

Launching the Web	130
Net Guard	130
Browsing the Web	131
Downloading through the Wireless Web	134
Confirming the Downloaded Data	134

14. Safety Guidelines135

Maintaining Your Phone's Peak Performance	135
Using Your Phone While Driving	135
Following Safety Guidelines	135
Using Your Phone Near Other Electronic Devices	136
Turning Off Your Phone Before Flying	136
Turning Off Your Phone in Dangerous Areas	137
Restricting Children's Access to Your Phone	138
Protecting Your Battery	138
Disposal of Lithium Ion (Li-Ion) Batteries	139
Cautions	139

Index141

KATANATM

User Guide



1. The Basics

Front View of Your Phone
























Key Features
















1. **Earpiece** lets you hear the caller and automated prompts.
2. **Signal Strength Indicator** represents the signal strength by displaying bars. The more bars displayed, the better the signal strength.
3. **Main LCD (display)** displays all the information needed to operate your phone, such as the call status, the Contacts list, the date and time, and the signal and battery strength.
4. **Side Volume Key** lets you adjust the receiver volume during a call or ringer volume in standby mode (with the phone open). You can also use it to scroll up or down to navigate through the different menu options. Press and hold up or down to make a voice dial or redial with the flip closed.
5. **Navigation Key** lets you navigate quickly and easily through the menu options. You can access the menu shortcuts by pressing **Right**: Contacts list, **Left**: My Favourites, **Up**: Send Quick Text., and **Down**: My Content.
6. **Softkey (left)** lets you select the menu corresponding to the bottom left line on the Main LCD.
7. **Camera Key** lets you access the Pictures menu and take pictures.
8. **MENU/OK** lets you access the phone's menus and select menu options.
9. **TALK Key** lets you place or receive calls, answer Call Waiting, use Three-Way Calling, or activate Voice Dial.
10. **SPEAKER Key** lets you place or receive calls in speakerphone mode.
11. **Charger Jack** connects the phone to the Travel Charger (included), or a USB cable (not included).
12. **Microphone** to speak into or record your voice.
13. **Internal Antenna** facilitates reception and transmission. To maximize call performance, do not obstruct the internal antenna area. (See page 10.)
14. **Monaural Headset Jack** allows you to plug in an optional monaural headset for convenient, hands-free conversations. Use the headset adapter (included) to connect your headset with your phone. **CAUTION!** Inserting an accessory into the incorrect jack may damage the phone.

15. **Keypad** lets you enter numbers, letters, and characters, and navigate within menus. Press and hold keys 2-9 for speed dialing.
16. **END/POWER Key** lets you turn the phone on/off, end a call, or return to standby mode. While in the main menu, it returns the phone to standby mode and cancels your input. When you receive an incoming call, press to enter silent mode and mute the ringer.
17. **BACK Key** lets you display the previous page or clear characters from the screen.
18. **Softkey (right)** lets you select the menu corresponding to the bottom right line on the Main LCD.
19. **Side Camera Key** lets you activate the camera mode by pressing and holding. Press to take pictures. You can also press and hold to end a call with the flip closed while you are using the speakerphone mode.
20. **Battery Strength Indicator** represents the amount of remaining battery charge currently available in your phone. When all bars are displayed in the battery icon, the phone's battery is fully charged. When no bars are displayed, the phone's battery is completely discharged or empty.
21. **Camera Lens**, as part of the built-in camera, lets you take pictures.
22. **Sub LCD** lets you monitor the phone's status and see who's calling without opening the phone.
23. **LED Indicator** shows your phone's connection status at a glance.
24. **Battery** powers your phone (Lithium-Ion [Li-Ion] battery included). See page 9 for details on charging and recharging.
25. **Speaker** lets you hear different ringers and sounds. You can mute the ringer when receiving incoming calls by pressing , , or any of the side keys. The speaker also lets you hear the caller's voice in speakerphone mode.

Viewing the Display Screen

This list identifies the symbols you'll see on your display screen.

- ▶  shows your current signal strength. The more lines you have, the stronger your signal.
- ▶  means your phone cannot find a signal.
- ▶  indicates the call is on hold.
- ▶  indicates a call is in progress.
- ▶  indicates 1X Data access is dormant. (Voice calls can still be made or received.)
- ▶  indicates 1X Data access is active.
- ▶  indicates 1X Service is available.
- ▶  indicates 1X Service is not available.
- ▶  indicates you are off the home network.
- ▶  indicates you are roaming on analog service network.
- ▶  indicates your phone is on analog service network.
- ▶  indicates you have missed voice calls.
- ▶  indicates you have scheduled events or call alarms.
- ▶  indicates you have alarm clock and/or countdown notifications.
- ▶  indicates you have new picture messages, voicemail messages, and text messages or Web Alerts waiting.
- ▶  indicates you have urgent text messages.
- ▶  indicates you have two or more different types of missed alerts (missed voice calls and other missed alarm clocks, call alarms, or scheduled events).
- ▶  indicates the Bluetooth feature is enabled (blue icon).
- ▶  indicates the handset is connected to a Bluetooth device (green icon).
- ▶  indicates the handset is discoverable by another Bluetooth device.
- ▶  indicates the handset is communicating with a Bluetooth device.

- ▶  indicates your access to a secure site.
- ▶  shows the level of your battery charge. The more black you see, the more power you have left. (The icon is animated while the battery is charging.)
- ▶  indicates your battery is charging in “Power Off” state.
- ▶  indicates the vibrate feature is set to ON.
- ▶  indicates volume level 8 or 1 and vibrate feature are set to ON.
- ▶  indicates a beep sounds once when you receive a phone call or message, etc.
- ▶  indicates the voice call ringer setting is OFF
- ▶  indicates all the sound settings are OFF
- ▶  indicates the Location Service of your phone is enabled.
- ▶  indicates the Location Service of your phone is disabled.
- ▶  indicates you have a new caller's message.
- ▶  indicates the Screen Call Auto setting is ON.
- ▶  indicates the Alarm Clock and/or countdown setting is ON.
- ▶  indicates your phone is in TTY mode.
- ▶  indicates the headset mode is set and a headset is connected.

Turning Your Phone ON and OFF

Turning Your Phone ON

- ▶ Press **END/0**.

Once your phone is ON, it displays “Looking for service...” which indicates that your phone is searching for a signal. When your phone finds a signal, it automatically enters standby mode. At this point, you are ready to begin making and receiving calls.

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. When a signal is found, your phone automatically returns to standby mode.

In Power Save mode, your phone searches for a signal periodically without your intervention. You can also initiate a search for service by pressing any key (when your phone is turned ON).

Tip: The Power Save feature helps to save your battery power when you are in an area where there is no signal.

Turning Your Phone OFF


- ▶ Press and hold **END/0** for two seconds until you see the powering down animation on the display screen.

Your screen remains blank while your phone is off (unless the battery is charging).

Using the Battery

Installing the Battery


1. Insert the battery into the opening on the back of the phone at a 45-degree angle, making sure to line up the gold contacts. Gently press down until the battery snaps into place.
2. Install the protective cover by lining up the tabs at a 45-degree angle, and gently press down until the cover snaps into place.

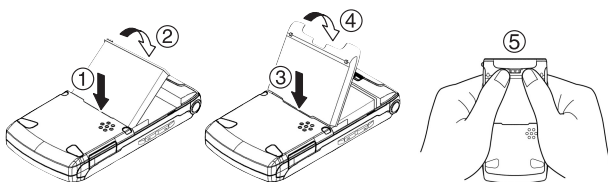

Removing the Battery


Warning! Do not handle a damaged or leaking Li-Ion battery as you can be burned.

1. Make sure the power is off so that you don't lose any stored numbers or messages. Remove the protective cover by pressing the release latch and pulling up on the back of the cover.
2. Use your thumbnail to lift and then remove the battery as indicated in the diagram.

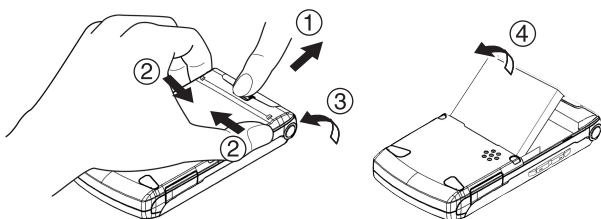

Charging the Battery

Your phone comes with a rechargeable battery. You should charge the battery as soon as possible so you can begin using your phone.

Keeping track of your battery's charge is important. If your battery level becomes too low, your phone automatically turns off and you will lose all the information you were just working on. For a quick check of your phone's battery level, glance at the battery charge indicator located in the upper-right corner of your phone's display screen. If the battery charge is getting too low, the battery icon  appears and the phone displays a warning message.


Always use an approved travel charger or vehicle power adapter to charge your battery.

Warning! Using the wrong battery charger could cause damage to your phone and void the warranty.

Note: Long backlight settings, searching for service, vibrate mode, and browser use affect the battery's talk and standby times.

Using the Travel Charger


1. Plug the travel charger into a wall outlet.
2. Plug the other end of the travel charger into the phone's charger jack (with the battery installed).

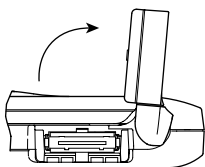

Rotate the charger jack cover as illustrated to access the charger jack.

Displaying Your Phone Number

1. Press **MENU OK** to access the main menu.
2. Select **Contacts**.
3. Select **My Phone#**.

Tip: From the My Phone# screen, you can send a business card (owner information) using Bluetooth. Press **Send via**  (right softkey) and follow the instructions. See “Using Bluetooth” on page 117 for information on Bluetooth.


Note: To access the phone’s main menu, press **MENU OK** from standby mode. Menu items may be selected by highlighting them with the navigation key and pressing **MENU OK**, or you can press the number corresponding to the menu item on your keypad.

Making and Answering Calls

Holding Your Phone

To maximize performance, do not obstruct the bottom portion of your phone where the internal antenna is located while using the phone.

Correct

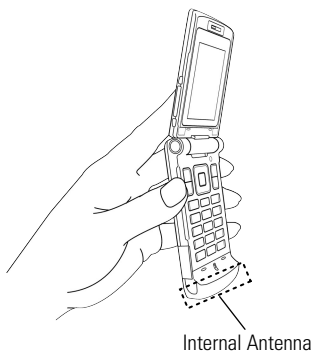

Incorrect



Making Calls

To place a call using your keypad:

1. Make sure your phone is on.
2. Enter a phone number from standby mode. (If you make a mistake while dialing, press **BACK** to erase one digit at a time. Press and hold **BACK** to erase the entire number.)
3. Press **TALK** or **SPEAKER**.
4. When you're finished, press **END/⓪**.

To place a call with the flip closed:

1. Make sure your phone is on.
2. Press and hold **◀▶** up or down on the left side of the phone.
3. Follow the system prompts. (The call will be made in speakerphone mode, unless you have a headset or other accessory attached to the phone.)
 - ▶ Say the name of your registered Voice tag (see the note below) or press **◀▶** up or down again to redial.

Note: To use a Voice Dial, you must have stored Voice tags. (See "Programming Voice Tag to Your Phone" on page 86.)

Note: This function is available only when the Side Key Guard setting is off. To temporarily deactivate the feature, see "Setting the Side Key Guard" on page 50.

Dialing Options

Dialing options are displayed when you press **Options** (right softkey) after entering numbers in standby mode.

- ▶ **Abbrev. Dial** to dial the phone number in your Contacts list that ends with the digits you entered. (See “Using Abbreviated Dialing” on page 23.)
- ▶ **Call** to dial the phone number.
- ▶ **Call:Speaker On** to dial the phone number in speakerphone mode.
- ▶ **Send Message** to send a Text SMS message (page 95), or a Picture message (page 110).
- ▶ **Save Phone#** to save the phone number in your Contacts list. (See “Saving a Phone Number” on page 20.)
- ▶ **Find** to display Contacts list entries that end with the digits you entered. (See “Finding a Phone Number” on page 20.)
- ▶ **[P] Hard Pause** to insert a hard pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 21.)
- ▶ **[T] 2-Sec. Pause** to insert a 2-second pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 21.)
- ▶ **Hyphen** to insert a hyphen manually where you like.


Tip: To speed dial a phone number, press and hold the appropriate Speed Dial location from 2-9. See page 71 for setting.

Answering Calls

To answer an incoming call with the flip open:

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)
2. Press **TALK** or **SPEAKER** to answer an incoming call. (Depending on your phone's settings, you may also answer incoming calls by opening the phone or by pressing any number key. See “Setting the Open/Close Flip Option” and “Setting Any Key Answer” on page 49 for more information.)

To answer an incoming call with the flip closed:

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)
2. When your phone rings or vibrates, press and hold the Side Volume key () up or down on the left side of the phone. (The call will be answered in speakerphone mode.)
 - or -
 - Open the phone to use the earpiece.

Note: If the **Open** menu of the **Open/Close Flip** feature is set to **No Action**, opening the phone will not answer the call. (See “Setting the Open/Close Flip Option” on page 49.)

Your phone notifies you of incoming calls in the following ways:

- ▶ The phone rings and/or vibrates.
- ▶ The LED flashes.
- ▶ The backlight illuminates.
- ▶ The screen displays an incoming call message.
- ▶ If available, the phone number of the caller is displayed.
- ▶ If the phone number is in your Contacts list, the contact's name is displayed.

The following options are also displayed by pressing **Options** (right softkey).

Note: If you set the **Open** menu of the **Open/Close Flip** feature to **Answer Call**, and if you open the flip when you receive a call, the options below are not available.


- ▶ **Answer** to answer the call.
- ▶ **Answer:Speaker** to answer the call in speakerphone mode.
- ▶ **Select Audio** to switch the call to your desired device (if available).
- ▶ **Answer on Hold** to put the call on hold. (See “Setting Answer on Hold” on page 14.)
- ▶ **Screen Call** to answer the call by using pre-recorded announcement. See page 90 for setting up.
- ▶ **Quiet Ringer** to mute the ringer. (This feature appears when the ringer is set.)

Tip: Your phone offers additional ways to answer calls. (See page 48 for Auto-Answer and page 49 for Any Key Answer.)

Setting Answer on Hold

This feature allows you to hold an incoming call when you cannot answer immediately.

To set Answer on Hold:

1. When you receive an incoming call, press **Options** (right softkey).
2. Select **Answer on Hold**. (The caller hears a message while waiting for you to answer.  will display on the screen while the call is on hold.)

To resume the call:

- ▶ Press **Answer** (left softkey) or **TALK**.
- or –
- Press **Options** (right softkey), select **Answer** or **Answer:Speaker**.

Note: Answer on Hold is not available in analog areas.

Ending a Call

- ▶ Close the phone or press **END/O**.

Note: If the **Close** menu of the **Open/Close Flip** feature is not set to **End**, closing the phone will not end the call. (See “Setting the Open/Close Flip Option” on page 49.)

Tip: Time/Date is displayed when you press **BACK** while the phone is in use.

Using the Speakerphone

The speakerphone feature lets you hear audio through the speaker and talk without holding the phone. When the speakerphone is activated, use the Side Volume key or press the navigation key up or down to adjust the volume.

To turn the speakerphone on during a call:

► Press **SPEAKER**.

– or –

Press **Options** (right softkey), select **Speaker On**.

To turn the speakerphone off during a call:

► Press **SPEAKER**.

– or –

Press **Options** (right softkey), select **Speaker Off**.

Warning! Due to higher volume levels, do not place the phone near your ear during speakerphone use.

Changing the Ringer Volume

To change the ringer volume, adjust the Side Volume key when the phone is open and in standby mode.

Note: To change the ringer volume from the main menu, see “Adjusting the Phone’s Volume Settings” on page 32.

Adjusting Volume During a Conversation

Whether you need to hear more or less of a conversation, adjust the Side Volume key or press the navigation key up or down during a call.

Muting a Call

To mute a call:

- ▶ Press **Options** (right softkey), select **Mute**. (When the phone is muted, “**Muted**” appears on the display.)

To unmute a call:

- ▶ Press **Options** (right softkey), select **Unmute**.

Tip: To use this feature with the flip closed, press and hold the Side Volume key () down.

Displaying the Missed Call Notification

When an incoming call is not answered, the Missed Call log is displayed on your screen.

To call the Missed Call entry:

- ▶ Press **Call** (left softkey).

Tip: If you have two or more notifications, the Missed Alerts list will appear.

To display a Missed Call entry from standby mode:

1. Press **MENU OK** to access the main menu.
2. Select **Missed Alerts**.
3. Highlight the entry you wish to view and press **MENU OK**.

Calling Emergency Numbers

You can place calls to 911 (dial **WXYZ 9** **1** **1** and press **TALK**), even if your phone is locked or your account is restricted. Once the dial is made, you will enter Emergency mode.

Press **Options** (right softkey), select an option.

- ▶ **Speaker On** to activate speakerphone mode. (If you are in speakerphone mode, the option will appear as **Speaker Off** to deactivate.)
- ▶ **Unlock Phone** to unlock your phone (appears only if the phone is locked).
- ▶ **Close Menu** to close the pop-up menu (appears only if the phone is unlocked).

Tip: Press **My Phone** (left softkey) to display your phone number during Emergency mode.

To exit Emergency mode:

1. Press **END/0**.
2. Press **Options** (right softkey) to display the options.
3. Select **Exit Emergency**.

Note: Emergency mode automatically times out after 5 minutes. You can also exit Emergency mode by performing the steps indicated above.

To select Emergency mode options:

1. Press **END/0** during a 911 call.
2. Press **Options** (right softkey).
 - ▶ **Call 911** to call 911.
 - ▶ **Call 911:Speaker** to call 911 in speakerphone mode.
 - ▶ **Exit Emergency** to exit Emergency mode.
3. Select an option.

In-Call Options

During a call, your phone displays menu options by pressing

Options (right softkey).

- ▶ **Flash** to answer an incoming call while putting the current call in Call Waiting or connect a third party for a Three-Way Call.
- ▶ **Mute** to mute your phone's microphone. Select **Unmute** to reactivate the microphone.
- ▶ **Transfer Audio** to switch the call to your desired device (if applicable).
- ▶ **Speaker On** or **Speaker Off** to activate or deactivate speakerphone mode.

Warning! Due to higher volume levels, do not place the phone near your ear during speakerphone use.

- ▶ **Three -Way Call** to call a third party.
- ▶ **Missed Alerts** to display missed notifications.
- ▶ **Call History** to access the Call History menu. (See “Managing Call History” on page 63.)
- ▶ **Contacts** to access the Contacts menu. (See “Contacts Directory” on page 66.)
- ▶ **Messaging** to access the Messaging menu. (See “Messaging” on page 93.)
- ▶ **Tools** to access the Tools menu. (See “Using Your Phone's Tools” on page 81.)
- ▶ **Settings** to access the Settings menu. (See “Your Phone's Settings” on page 29.)

Note: The Flash menu only appears in Call Waiting and in Three-Way Calling. Mute menu does not appear during a 911 call.

Transfer Audio

The transfer audio function lets you switch the call from your phone to a hands-free device without disconnecting the call.

To transfer audio during a call:

- ▶ Press **SPEAKER** repeatedly to switch between different audio modes.
 - or –
- 1. Press **Options** (right softkey).
- 2. Select **Transfer Audio**, and then select the desired audio device.

End-of-Call Options

To display the following options, press **Options** (right softkey) within 10 seconds after disconnecting a call.

- ▶ **Call Again** to dial the phone number.
- ▶ **Call:Speaker On** to dial the phone number in speakerphone mode.
- ▶ **Save Phone#** to save the phone number in your Contacts list. **Go to Phone Book** appears when the number is already in your Contacts list. (See “Saving a Phone Number” on page 20.)

Note: The End-of-Call options are not displayed for calls identified as No ID or Restricted.

Saving a Phone Number

Your phone can store up to seven phone numbers in each of 500 Contact entries with up to 700 total numbers. Each entry's name can contain 32 characters. Your phone automatically sorts the Contacts alphabetically.

1. Enter a phone number.
2. Press **Options** (right softkey).
3. Select **Save Phone#**.
4. Select a label and press **MENU OK**.
5. Select **New Name** or **From Ph. Book** to enter a name.
 - ▶ **New Name** to enter a new name.
 - ▶ **From Ph. Book** to select a name from the Contacts entry list.
6. Press **Save** (left softkey).
7. Press **Done** (left softkey) to return to standby mode.

Finding a Phone Number

You can search Contacts list entries for phone numbers that contain a specific string of numbers.

1. Enter the last four or more digits of the number and press **Options** (right softkey). (The more numbers you enter, the more specific the search becomes.)
2. Select **Find**. (The Contacts entry that ends with the digits you entered appears.)
3. Highlight your desired entry.
 - Press **MENU OK** to display the entry details.
 - Press **TALK** or **SPEAKER** to dial.

Dialing and Saving Phone Numbers With Pauses

You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers.

There are two types of pauses available on your phone:


- ▶ **Hard Pause** sends the next set of numbers when you press **TALK**.
- ▶ **2-Sec. Pause** automatically sends the next set of numbers after two seconds.

Note: You can have multiple pauses in a phone number and combine 2-second and hard pauses.




1. Enter the phone number and press **Options** (right softkey).
2. Select either **Hard Pause** or **2-Sec. Pause**. Hard Pauses are displayed as a “P” and 2-second pauses as a “T”.
3. Enter additional numbers.
4. To dial the number, press **TALK** or **SPEAKER**. (When dialing a number with a hard pause, press **TALK** to send the next set of numbers.)
 - or –
 - To save the number in your Contacts list, press **Options** (right softkey), select **Save Phone#**.



Note: The use of Hard Pause or 2-Sec. Pause will disengage the ability to adjust the volume level of the call using the Side Volume key.

Dialing From the Contacts Directory

1. Press  to access the main menu.
2. Select **Contacts**.
3. Select **Find/Add Entry**.

Shortcut: Press the navigation key right to list entries.

4. Use your navigation key to scroll through the Contacts list, select one of the appropriate entries and press .
5. Highlight the number you wish to call.
6. Press  (right softkey) or  for the menu options.
7. Select **Call** or **Call:Speaker On**.

Tip: You can also make a call by pressing  or  during step 5 above.

Note: The icon next to each entry represents the Contacts labels (for example, Mobile, Home, Work, etc.). A triangle next to an icon means there are other labels for the entry. Press the navigation key right or left to select the desired label.

Using Speed Dialing

With this feature, you can dial your favourite entries using one key press for locations 2-9. (See page 71 for storing a Speed Dial number.)

To use speed dial for voice calls:

- From standby mode, press and hold the appropriate key for approximately two seconds.

– or –

From standby mode, press the appropriate key and press  or .

The display confirms that the number has been dialed when it shows “Connecting...”.

Using Abbreviated Dialing

Abbreviated Dialing is similar to speed dialing. You can use either of the following abbreviated dialing features.

- ▶ **Ph. Book Match** allows you to retrieve any desired number saved in your Contacts by entering only the last three to six digits of the number, and dials the retrieved number. (See “To activate Ph. Book Match feature” on page 52.)
- ▶ **Prepend** allows you to prepend predefined number (first five or six digits) to the last four or five digits you enter, and then dials the number. (See page 52 to register a prepend number and activate the Prepend feature.)

To place a call using Ph. Book Match Abbreviated Dialing:

1. Dial the last 3-6 digits of a contact's phone number.
2. Press **TALK** or **SPEAKER**. If there is more than one matched number in your Contacts list, Abbrev. Dial list appears.
3. Select the name you want to call, and then press **TALK** or **SPEAKER** to place a call.

Tip: You can also place a call by pressing **Options** (right softkey) and select **Abbrev. Dial** after step 1 above.

Note: When **Ph. Book Match** is set to **Enable** and your desired number is saved in **Contacts** (regardless of whether **Prepend** is enabled or disabled), you can display the number by entering its last three to six digits. (See page 24 for **Ph. Book Match** and **Prepend**.)

To place a call using Prepend Abbreviated Dialing:

1. Enter the last four or five digits of your desired number.
2. Press **TALK** or **SPEAKER**.

Note: When **Prepend** is set to **Enable** and **Ph. Book Match** is set to **Disable**, you can display the 10-digit number (including the predefined prepend number) by entering the last four or five digits of the number.

Note: The **Prepend** feature is available when all of following conditions are met:

- **Prepend** is set to **Enable**.
 - A prepend number has been predefined.
 - The combined total (prepend number plus the digits you enter) is 10 digits.
-

Note: When both **Ph. Book Match** and **Prepend** are set to **Enable** and your desired number is not saved in **Contacts**, you can display the 10-digit number (including the five- or six-digit prepend number) by entering the last four or five digits of the number.


Selecting a Character Input Mode

Your phone provides convenient ways to enter words, letters, punctuation, and numbers whenever you are prompted to enter text (for example, when adding a Contacts entry or when sending text, picture messages).

1. When you display a screen where you can enter text, press **Mode** (right softkey).
2. Select a character input mode:

Note: The menus displayed vary according to the entry field. If you see triangles on the right and left of the menu, you can press the right and left navigation keys to switch between related menus.

- ▶ **Alphabet** to enter characters by using the keypad.
- ▶ **T9 Word** to enter characters using T9 Text Input (see page 26).
- ▶ **SYMBOL** to enter symbols.
- ▶ **SMILEYS** to enter smiley pictures.
- ▶ **Emoticons** to enter an emotion icon. (For Text Message only.)
- ▶ **PRESET SUFFIX** to enter a preset suffix.
- ▶ **Canned Messages** to enter canned messages.
- ▶ **Recent Messages** to enter messages used recently.
- ▶ **Paste** to paste copied or cut text (if applicable).
- ▶ **NUMBER** to enter numbers.
- ▶ **Signature** to enter your signature (see page 44).
- ▶ **Select Language** to select the language (English or French).
- ▶ **Erase All** to erase all text (if applicable).
- ▶ **Select Text** to select stored text for copying or cutting.
- ▶ **Add Word** to store words that you use frequently.

Tip: Before entering text, press the **Shift**  key to change letter capitalization (**Abc** > **ABC** > **abc**).

Note: Up to three of the most recently used input modes are displayed from the top of the input mode list when **Mode** (right softkey) is pressed during text entry. To turn off this feature, select **MENU**  > **Settings** > **Others** > **Text Entry** > **Recent Access** > **Off**.

Entering Characters Using T9 Text Input

T9 Text Input lets you enter text in your phone by pressing keys just once per letter. (To select the **T9Word** mode when entering text, see “Selecting a Character Input Mode” on page 25.)

T9 Text Input analyses the letters you enter using an intuitive word database and creates a suitable word. (The word may change as you type.) To accept a word and insert a space, press **Space#** or **MENU OK**.

Tip: The **MENU OK** key is available only when the Auto Space setting is on (see page 51).

If you make a mistake, press **BACK** to erase a single character. Press and hold **BACK** to delete an entire entry.

Adding a Word to the T9 Database

If a word you want to enter does not display as an option when you are using T9 Text Input, you can add it to the database.


To add a word to the T9Text Input database:

1. Select **Add Word** mode. (See “Selecting a Character Input Mode” on page 25.)
2. Enter the word using the keypad (Alphabet) and press **Save** (left softkey).


To edit or erase the words you have added:

1. Press **MENU OK** to access the main menu.
2. Select **Settings**.
3. Select **Others**.
4. Select **Text Entry**.
5. Select **My Words**.
6. Highlight your desired word and press **Options** (right softkey).
7. Select an option.
 - ▶ **Edit** to edit a word in My Words.
 - ▶ **Erase** to erase a word in My Words.

Customizing the T9 Settings

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Others**.
4. Select **Text Entry**.
5. Select **T9 Settings**.
6. Select your desired option.
 - ▶ **Predict.Text Mode** to allow T9 text input to recognize words you have added to the T9 database.
 - ▶ **Word Choice List** to display word choice list.
 - ▶ **Show after enter** to select digits number (1-3 digits) to display the words choice list. The word choice list will display based on the number of digits you selected.
 - ▶ **Show after wait** to select how many seconds the phone should wait to display the word choice list.

Setting the Default Input Mode

1. Follow steps 1-4 above.
2. Select **Default Input**.
3. Select an option and press .
 - ▶ **T9 Word** to select the T9 word mode for the initial entry mode.
 - ▶ **Alphabet** to select the Alphabet mode for the initial entry mode.
 - ▶ **Retain Mode** to set the retain mode on to retain the previous entry mode.

Entering Characters Using the Keypad

To enter characters using the keypad, select the **Alphabet** mode (see “Selecting a Character Input Mode” on page 25). Press the corresponding key until the desired character appears. By default, the first letter of a word is capitalized and following letters are lowercase.

Characters scroll in the following order:

Key	English Sequence	
	Upper Case	Lower Case
1	., @ 1 ? ! * # /	
2	A B C 2	a b c 2
3	D E F 3	d e f 3
4	G H I 4	g h i 4
5	J K L 5	j k l 5
6	M N O 6	m n o 6
7	P Q R S 7	p q r s 7
8	T U V 8	t u v 8
9	W X Y Z 9	w x y z 9
+ 0	0	
Space #	Space	
Shift ✕	One-character-shifted Caps Lock Unshifted	

In French mode, characters scroll in the following order:

Key	French Sequence	
	Upper Case	Lower Case
1	., @ 1 ? ! * # /	
2	A B C Â Ã Ç 2	a b c â ã ç 2
3	D E F É Ê Ë Ë 3	d e f é ê ë ë 3
4	G H I Î Ï 4	g h i î ï 4
5	J K L 5	j k l 5
6	M N O Ô 6	m n o ô 6
7	P Q R S 7	p q r s 7
8	T U V Ù Û Ü 8	t u v ù û ü 8
9	W X Y Z 9	w x y z 9
+ 0	0	
Space #	Space	
Shift ✕	One-character-shifted Caps Lock Unshifted	

See page 25, 51 for changing French entry mode.

After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character not on the same key.

2. Your Phone's Settings



Reminder: To access the phone's main menu, press  from standby mode. Menu items may be selected by highlighting them with the navigation key and pressing .

Sound Settings




Selecting Ringer Types for Voice Calls

Select a ringer type for voice calls so that you can recognize when a certain type of call is coming in:

To select a ringer type for voice calls:


1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Sounds**.
4. Select **Ringer Type**.
5. Select **Voice Calls**.
6. Select **With Caller ID** or **No Caller ID**.
7. Scroll to your desired ringer type and press .

Selecting Ringer Types for Voicemail, Messaging or Calendar/Alarm




1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Sounds**.
4. Select **Ringer Type**.
5. Select **Voicemail, Messaging** or **Calendar/Alarm**.
6. Press , scroll to your desired ringer type, and press .

Selecting Vibrate Pattern


With this feature, you can select vibrate pattern for incoming calls, messages, and schedule alarms.

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Sounds**.
4. Select **Vibrate Pattern**.
5. Select **Voice Calls**, **Voicemail**, **Messaging**, or **Calendar/Alarm**. If you have selected **Voice Calls**, select **With Caller ID** or **No Caller ID**.
6. Using the navigation key, select your desired vibrate pattern.



Selecting Ringer Types for Messaging

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Sounds**.
4. Select **Ringer Type**.
5. Select **Messaging**.
6. Press , scroll to your desired ringer type, and press .

Selecting a Tone Length

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Sounds**.
4. Select **Others**.
5. Select **Tone Length**.
6. Select **Short** or **Long**.

Setting a Start-up/Power-off Tone

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Sounds**.
4. Select **Others**.
5. Select **Start-up Tone** or **Power-off Tone**.
6. Scroll to your desired tone, and press .

Using Voice Prompt


This feature allows you to hear voice prompts at Voice Memo, etc. (Default Setting is Off.)

1. Follow the steps 1-4 above.
2. Select **Voice Prompt**.
3. Select **On**.

Tip: When ringer volume is set to “Silence All”, voice prompts cannot be heard.

Setting Up Key Press Echo



With this feature, you can hear a voice say the numbers when you press the keypad. This feature is available when you are in standby mode.

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Sounds**.
4. Select **Others**.
5. Select **KeyPress Echo**.
6. Select **On** or **Off**.



Note: If the Key Beep is off, you are not able to change this setting. See “To adjust the ringer/key volume” on page 32.

Adjusting the Phone's Volume Settings

To adjust the ringer/key volume:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Sounds**.
4. Select **Ringer/Key Vol.**
5. Select the menu you wish to change.
6. Adjust the volume level by using the navigation key (up or down) and press .



To adjust earpiece or speaker volume:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Sounds**.
4. Select **Receiver Vol.**
5. Select either **Earpiece** or **Speaker**.
6. Adjust the volume level by using the navigation key (up or down) and press .

Tip: You can adjust the ringer volume in standby mode (or the earpiece volume during a call) by using the Side Volume key.

To adjust the application volume:



This option allows you to select a volume level for downloaded data and browser.

1. Follow steps 1-3 above.
2. Select **Application Vol.**
3. Press , choose a volume level, and press .

Alert Notification



Your phone comes with several different options to keep you aware of what's going on by sounding the alert or ringer.

To set the alerts:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Sounds**.
4. Select **Alerts**.
5. Select your desired option.
 - ▶ **Service** sets alert on or off for network services parameter changes.
 - ▶ **Voicemail** sets an alert to notify you of voice message(s). Select **Ringer Length** to set the ringer length of Voicemail notification.
 - ▶ **Messaging** sets an alert to notify you of Text, Picture Message, or Web Alerts. Select **Ringer Length** to set the ringer length of Messaging notification.
 - ▶ **Minute Beep** sets a minute reminder that beeps ten seconds before the end of each minute during a call.
 - ▶ **Signal Fade** sets alert to notify you when your phone loses a signal during a call.
6. Use your navigation key to select a setting and press .

Tip: You can select **Once** or **Repeat Alert** if you select Voicemail or Messaging. **Repeat Alert** sounds an alert every two minutes for twenty minutes.

Silence All

1. Press  to access the main menu.
 2. Select **Settings**.
 3. Select **Sounds**.
 4. Select **Ringer/Key Vol.**
 5. Select **Ringer Volume**.
 6. Press the navigation key down until “Silence All” appears on the display and press .
- ▶ To deactivate this feature, select a volume level you wish during step 6 above.



Shortcut: With the flip open, press the Side Volume key down repeatedly until “Silence All” appears.

Tip: When Ringer Volume is set as Silence All, other items are changed to Off and cannot be highlighted by the cursor.

Display Settings

Changing the Greeting


To display or change your custom greeting:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Display**.
4. Select **Greeting**.
5. Select **Custom**.
6. Customize the greeting using your keypad. (See “Selecting a Character Input Mode” on page 25.)
7. Press .

To select the default greeting:

1. Follow steps 1-4 above.
2. Select **Default**.

Changing the Backlight Time Length

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Display**.
4. Select **Backlight**.
5. Select **Main LCD**, **Key** or **Sub LCD**.
6. Select **Always On**, **Always Off** or your defined time length.



Note: If you select **Always On** above, once you turn your phone off and then on again, the setting returns to the setting you set before changing to **Always On**.

Note: Long backlight settings affect the battery's talk and standby times.





Note: Depending on the Sleep Mode setting, the LCD backlight turns off even if the setting is **Always On**. (See page 39 for details.)

Changing the Display Screen



Your new phone offers animation for what you see on the display screen when in Standby mode, Outgoing Calls or Service Search.

1. Press  to access the main menu.
 2. Select **Settings**.
 3. Select **Display**.
 4. Select **Animation**.
 5. Select **Standby, Outgoing Calls, or Service Search**.
 6. Press  to select your desired option.
- For Standby, you can also set animation starting time. Select **Time**, then select your desired setting time.

Changing the Display for Incoming Calls

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Display**.
4. Select **Incoming Calls**.
5. Select an option (**Preset, My Content, Get New, In Camera, Saved to Phone, or Off**) and press .
6. Select the desired color or image, press , and then press  (left softkey) to assign.




Changing the Phone's Menu Style

1. Press  to access the main menu.
2. Press  (right softkey).
3. Select **Change View**.
4. Select **Grid View** or **List View**.

Changing the Clock/Calendar Display for Standby Mode

Select from among a variety of items to be displayed in standby mode.




To set the clock/calendar display for standby mode:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Display**.
4. Select **Clock/Calendar**.
5. Select **Main LCD** or **Sub LCD**.
6. Select an item and press .
7. Press  (left softkey) to apply the setting.

Changing the Screen Saver

Your new phone offers you the option of displaying a screen saver while in standby mode.

To change the screen saver:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Display**.
4. Select **Screen Saver**.
5. Select **Main LCD** or **Sub LCD**.
6. Select an option (**Preset**, **My Content**, **Get New**, **In Camera**, **Saved to Phone**, or **Off**) and press .
7. Select the desired screen saver and press  (left softkey).

Changing the Font Size

1. Press **MENU OK** to access the main menu.
2. Select **Settings**.
3. Select **Display**.
4. Select **Others**.
5. Select **Font Size**.
 - ▶ **View** to select **Messaging** or **Browser**.
 - ▶ **Input** to select **Phone#s**, **Messaging** or **Others**.
6. Select your desired font size.

Tip: From the preview display, you can switch your desired font size by pressing the navigation key right or left.


Setting Return to Standby Mode

1. Press **MENU OK** to access the main menu.
2. Select **Settings**.
3. Select **Display**.
4. Select **Others**.
5. Select **Return to Idle**.
6. A message appears. Press **OK** (left softkey) to continue.
7. Select **Automatically** or **End Key**.
 - ▶ **Automatically** to return to standby mode automatically in 30 seconds.
 - ▶ **End Key** to return to standby mode by pressing **END/⓪**.

Note: **End Key** setting affects the battery's talk and standby times.



Sleep Mode

This feature helps conserve your battery power by restricting the display.

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Display**.
4. Select **Others**.
5. Select **Sleep Mode**.
6. Select **Main LCD** or **Sub LCD**.
7. Select your desired option.
 - ▶ To deactivate this feature, select **Off** during step 7 above.

Power Save Mode

This feature helps conserve your battery power. If you set this feature to on, the length of time before the phone goes into sleep mode is automatically set to the minimum value, and the LCD and keypad backlights are turned off.

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Display**.
4. Select **Power Save Mode**.
5. A message appears. Press  (left softkey) to continue.
6. Select **On**. (Select **Off** to deactivate this feature.)

Location Settings

Location Services

This cell phone is Assisted GPS Ready for services such as:

- Finder Services
- Seek & Find™
- Business Tracking Services
- e9-1-1

This cell phone is not intended to operate as a GPS satellite receiver. e9-1-1 services that use Assisted GPS are not currently available. While these services are not available today, this cell phone has the technology required to support such services upon their launch.





Your Privacy



Subscriber personal location information is subject to strong privacy protection, including physical, electronic and procedural safeguards. Bell Mobility will first obtain the express consent of subscribers before using or disclosing location information. At all times, Bell Mobility customers will be in full control of their location information through the location menu option in this cell phone and a secure on-line privacy profile that is available through Bell Mobility eCare at www.bell.ca. Except for basic telephone and 911 service, Bell Mobility will only use your location information with your consent. For more information about our Finder Services privacy policy, please visit www.bell.ca/finderservices.

Settings

The settings allow you to turn the Assisted GPS chipset in the cell phone to “Allow” or “Deny.” Setting location to **On** lets the network detect the cell phone’s geographic location using Assisted GPS, making some features easier to use. Setting location to **Off** disables Assisted GPS, but some features may still detect the cell phone’s whereabouts using cell tower technology. Assisted GPS is automatically set to **On** when an emergency call is placed, then set back to **Off** when the call is completed.

To set the Location Menu to **ALLOW** or **DENY**:


1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Location**. (You will see a message on the display.)
 - ▶ Press  (right softkey) to return to the setting display.
4. Press  or  (left softkey).
5. Select **On** or **Off**.

Tip: When the Location feature is on, your phone’s standby screen will display the  icon. When Location is turned off, the  icon will be displayed.

Messaging Settings


Setting Message Notification

You can set your phone to display an icon and message notification or just display an icon notification when you receive a text message, picture message, voicemail, or Web Alert.

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Messaging**.
4. Select **Notification**.
5. Select **Msgs and Icon** or **Icon Only**.

Setting Push Options



Turning this feature on allows you to connect to a Web Alerts page automatically (if possible) when you receive a Web Alert. See page 94 for Web Alerts.

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Messaging**.
4. Select **Push Options**.
5. Select **Yes** or **No**.

Editing Canned Messages

Your phone can store canned messages for use with text messaging. You can edit your phone's default canned messages through the Settings menu.

To edit a canned message:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Messaging**.
4. Select **Canned Msgs**.
5. Select the message you want to edit and press .

6. Use your keypad to edit the message and press **OK** (left softkey) or **MENU OK** to save your changes.

Note: To reset all messages, press **Options** (right softkey), select **Reset All Msgs** during step 5 on page 42.

To change the language of the canned messages:

1. Follow steps 1-4 on page 42.
2. Press **Options** (right softkey) and select **Select Language**.
3. Select **English** or **French**.

Note: For information on editing text, see "Selecting a Character Input Mode" on page 25.





Setting Your Callback Number


With this feature, you can send a callback number with your text message.

1. Press **MENU OK** to access the main menu.
2. Select **Settings**.
3. Select **Messaging**.
4. Select **Send Callback#**.
5. Select an option from the following.
 - ▶ **None** to send no callback number.
 - ▶ **My Phone#** to send your phone number.
 - ▶ **Other** to send a defined number. To set a number, enter a phone number and press **MENU OK**.

Setting Your Signature


This feature allows you to send a text message with your signature.

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Messaging**.
4. Select **Signature**.
5. Press , and then select **On**.
6. Select **Text** and enter your signature and press  (left softkey).
7. Press  (left softkey) to save your signature.

Note: You can insert your signature even when your signature setting is off. Press  (right softkey) and select **Signature** while composing your message.

Setting Drafts Alert

Drafts Alert sends you a reminder when you have unsent messages waiting in the drafts folder.




1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Messaging**.
4. Select **Drafts Alert**.
5. Select **On**.



TTY Use

A TTY (also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf or hard of hearing, or who have speech or language disabilities, to communicate via a telephone.

Your phone is compatible with select TTY devices. Please check with the manufacturer of your TTY device to ensure that it supports digital wireless transmission. Your phone and TTY device will connect via a special cable that plugs into your phone's headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Others**.
4. Select **TTY**. (You will see a message on the display.)
5. Press  or  (left softkey) to continue.
6. Select **Enable** or **Disable**.

Note: When you connect TTY devices, your phone will display  in TTY mode.





Note: If TTY mode is enabled, the audio quality of non-TTY devices connected to the headset jack may be impaired.

IMPORTANT NOTICE: 911 Emergency Calling

It is recommended that TTY users make emergency calls by other means including cellular and landline communications.

Airplane Mode

When your phone is in Airplane mode, it cannot send or receive any calls (except for 911 dialing) or access online information. You may still use the phone's other features, such as Voice Memo, Calculator, Calendar, etc., while you are in Airplane mode.

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Others**.
4. Select **Airplane Mode**. (You will see a message on the display.)
 - ▶ Press  (right softkey) to return to the setting display.
5. Press  or  (left softkey).
6. Select **On** or **Off**.



Note: While in Airplane mode, your phone's standby screen will display "Phone Off."

Phone Setup Options



My Favourites

Your phone offers you the option of assigning a shortcut key to a favourite or often-used function. Pressing the navigation key left in standby mode will launch your user-defined shortcut.

To assign your shortcut key:


1. Press the navigation key left.
2. Highlight **<AddFavourite>** and press .
3. Select one of the following options.
 - ▶ **Contact** to display stored Contacts entries.
 - ▶ **My Content** to display downloaded items stored in your phone.
 - ▶ **My Pictures** to display thumbnail images stored in your In Camera and Saved to Phone folders.
 - ▶ **Web Bookmark** to display your bookmarked sites.
 - ▶ **Menu Item** to assign an often-used menu item.
4. Using the navigation key or your keypad, select a function to be assigned to the My Favourites list.
5. Press  (left softkey) to save.

To edit the shortcut:


1. Press the navigation key left.
2. Select your desired menu and press  (right softkey).
3. Select your desired option and press .

Auto Answer Mode



This feature sets the phone to automatically pick up incoming calls in speakerphone mode or hands-free mode (when connected).

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Others**.
4. Select **Auto Answer**.
5. Select **Hands-free** or **Speakerphone**.
6. Select **5 Seconds**, **10 Seconds**, or **Off**.

Changing the Menu Language

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Others**.
4. Select **Language**.
5. Select **English** or **Française**.

Setting the Current Time

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Others**.
4. Select **Set Time/Date**.
5. Set the current time and date and press  (left softkey).

Note: This feature is only available when you are in an area with no digital network available.

Setting Any Key Answer

This feature allows you to answer incoming calls by pressing any key (except **END/⓪**, **BACK**, softkeys, and sidekeys).

1. Press **MENU OK** to access the main menu.
2. Select **Settings**.
3. Select **Others**.
4. Select **Any Key Answer**.
5. Select **On** or **Off**.

Setting the Open/Close Flip Option

This feature enables you to answer an incoming call by opening the flip or to end a call by closing the flip.

To activate the Open Flip feature:

1. Press **MENU OK** to access the main menu.
 2. Select **Settings**.
 3. Select **Others**.
 4. Select **Open/Close Flip**.
 5. Select **Open**.
 6. Select **Answer Call**.
- To deactivate this feature, select **No Action** during step 6 above.

To activate the Close Flip feature:

1. From step 5 above, select **Close**. (You will see a message on the display.)
2. Press **OK** (left softkey) to continue.
3. Select an option from the following.
 - ▶ **End** to end the call.
 - ▶ **Continue (Mute)** to continue the call. Your voice is muted, however you can hear the caller's voice from the speaker.
 - ▶ **Continue (Unmute)** to continue the call. You can hear the caller's voice and speak to the phone to answer.

Note: The Close Flip feature does not apply when you are using the speakerphone, a headset, or a car kit.

Setting the Side Key Guard


This feature enables you to lock the side keys while the flip is closed.

1. Press **MENU OK** to access the main menu.
2. Select **Settings**.
3. Select **Others**.
4. Select **Side Key Guard**.
5. Select **On** or **Off**.

Note: This feature does not apply when the flip is open.


Tip: You can deactivate this feature temporarily by pressing and holding **CALL** while the phone is closed. Note that the Side Key Guard will reactivate if the phone is left unoperated for approximately 30 seconds or if the phone is opened and re-closed.

Setting the Text Entry


1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Others**.
4. Select **Text Entry**.
5. Select your desired option.
 - ▶ **Auto-Capital** to set the auto-capital on or off.
 - ▶ **My Words** to add a word to or edit a word in the T9 database (see page 26).
 - ▶ **Input Language** to select the language (English or French).
 - ▶ **Default Input** to select **T9 word**, **Alphabet**, or **Retain Mode** for the initial entry mode. Set **Retain Mode** to retain the previous entry mode (see page 27).
 - ▶ **Auto-Space** to set the auto-space on or off after T9 words you enter.
 - ▶ **Recent Access** to display the three most recently used input mode menu items.
 - ▶ **T9 Settings** to customize the T9 settings (see page 27).
 - ▶ **Add Word** to store words that you use frequently (see page 25).
 - ▶ **Help** to see the T9 instruction page.

Setting Abbreviated Dialing

To activate Ph. Book Match feature:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Others**.
4. Select **Abbrev. Dial**.
5. Select **Ph. Book Match**.
6. Select **Enable**.

To set your prepend number:

1. Follow steps 1-4 above.
2. Select **Prepend**.
3. Select **Enable**.
 - ▶ To deactivate this feature, select **Disable** during step 3 above.
4. Select **Prepend#**.
5. Enter a five- or six-digit number (for example, an area code and prefix) and press  (left softkey).

Tip: To dial the prepend number, see “Using Abbreviated Dialing” on page 23.

Note: This setting does not apply to 911 or Directory Assistance.



Headset Mode

This feature allows you hands-free phone use. Press the Turbo Button (the operation button) on the headset to activate useful functions.


To connect the headset:

- ▶ Simply plug the headset into your phone's headset jack.

To set headset mode:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Others**.
4. Select **Headset Mode**.
5. Select **Turbo Button**.
6. Select your desired option and press :
 - ▶ **On**: Press the Turbo Button to activate Voice Dial. Press twice to redial the last call. Press and hold to record a Voice Memo.
 - ▶ **Off**: Select **Off** if you do not wish to assign a Turbo Button setting or if your headset does not have a Turbo Button.


To set the ringer sound:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Others**.
4. Select **Headset Mode**.
5. Select **Ringer Sound**.
6. Select **Normal** or **Headset Only**.

3. Security

Accessing the Security Menu

You must enter your lock code to view the Security menu.

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Security**.
4. Enter your lock code.


Tip: If you can't recall your lock code, try using the last four digits of your phone number or 0000.

Locking Your Phone

Lock Phone automatically locks the keys. If you set Lock Phone, you must enter the lock code beforehand to make a call. In this way you can prevent other people from using your phone. However, even when your phone is locked, you can make calls to 911, Customer Service, and to special numbers without entering the lock code.

1. From the Security Menu display (See “Accessing the Security Menu” above), select **Lock Phone**.
2. Select **Lock Now** or **On Power-up**.
3. Select either **Full Lock** or **Excep. Incoming Calls**.
 - ▶ **Full Lock** to restrict both outgoing and incoming calls.
 - ▶ **Excep. Incoming Calls** to restrict outgoing calls while allowing incoming calls.

Unlocking Your Phone

1. Press  (left softkey).
2. Enter your lock code.

Locking the Pictures Menu

With this feature, you must enter your lock code when you access the Pictures menu.

1. From the Security Menu, select **Pic Messaging**.
2. Select **Lock Pictures**.
3. Select **Lock Now**.
 - ▶ To deactivate this feature, select **Unlocked** during step 3 above.

Lock Services

With this feature, you can choose to restrict access to the Internet, incoming and outgoing voice calls.

1. From the Security Menu, select **Others**.
2. Select **Lock Services**.
3. Select **Voice Calls** or **Internet**.
4. Select **Locked**.
 - ▶ To deactivate this feature, select **Unlocked** during step 4 above.

Note: If **Voice Calls** is locked, making and receiving calls are not available. (You can only make a call to 911.)

Changing the Lock Code

1. From the Security Menu display (See “Accessing the Security Menu” on page 54), select **Others**.
2. Select **Change Lock**.
3. Enter a new lock code, “1234” for example.
4. Reenter the new code.

Calling in Lock Mode

You can place calls to 911, Customer Service, and to your special numbers even in lock mode except when **Voice Calls** is locked. (See “Lock Services” above.)

- ▶ To call an emergency number, special number, or Customer Service, enter the phone number and press **TALK**.

Restricting Calls

You can restrict phone numbers your phone dials or receives.

1. From the Security Menu display (See “Accessing the Security Menu” on page 54), select **Others**.
2. Select **Limit Use**.
3. Select **Outgoing Calls** or **Incoming Calls**.
4. Select your desired option.
 - ▶ **Allow All:** You can make or receive all calls.
 - ▶ **Phone Book Only:** Only Contacts entries or special numbers (see below) are available to make or receive calls.
 - ▶ **Special #s Only:** You can make or receive calls to or from three special numbers only. (You must register the numbers beforehand. See “Using Special Numbers” below.)



Note: You can make calls to 911, Customer Service, and to your special numbers even when you restrict outgoing calls.

Note: Restricted incoming calls are forwarded to voicemail.

Using Special Numbers



You can save three special numbers on your phone. You can receive calls from special numbers even when your phone is locked.

To add or edit a special number:

1. From the Security Menu display (See “Accessing the Security Menu” on page 54), select **Others**.
2. Select **Special #s**.
3. Select a field to enter the number and press .
4. Enter or edit the number and press .


Note: Special numbers cannot be called in the voice call locked state.

Erasing Phone Content

1. From the Security Menu display (See “Accessing the Security Menu” on page 54), select **Erase/Reset**, and then select the item from the following and press .
 - ▶ **Erase Ph. Book** to erase all of your Contacts entries.
 - ▶ **Erase My Content** to erase all items you have downloaded to your phone.
 - ▶ **Erase Pictures** to erase all pictures saved in your phone.
 - ▶ **Erase VoiceMemo** to erase all voice memos you have recorded.
 - ▶ **Erase Voice Tag** to erase all Voice tags you have recorded.
 - ▶ **Erase Messages** to erase all text messages (including locked ones) in the Inbox, Sent Mail, Pending, Drafts folders, and your defined folders; all Recent Lists; and all user-created canned messages.
2. Press  (left softkey) to continue.
3. If you are certain you would like to reset, select **Yes**.

Resetting Your Picture Messaging Account

This option resets your authentication ID for your Picture Messaging account.

1. From the Security Menu display (See “Accessing the Security Menu” on page 54), select **Pic Messaging**.
2. Select **Reset Pic Msg**.
3. Press  (left softkey) to continue.
4. If you are certain that you would like to reset your Picture Messaging account, select **Yes**.

Resetting Your Phone

Resetting the phone restores all the factory defaults, including the ringer types and display settings. The Contacts, Call History, Calendar, and Messaging are not affected.

1. From the Security Menu display (See “Accessing the Security Menu” on page 54), select **Erase/Reset**.
2. Select **Reset Phone**. (A disclaimer appears.)
3. Press **OK** (left softkey) to continue.
4. If you're sure you want to reset your phone, select **Yes**.

Resetting the Browser

1. From the Security Menu display (See “Accessing the Security Menu” on page 54), select **Erase/Reset**.
2. Select **Reset Browser**.
3. Press **OK** (left softkey) to continue.
4. If you are certain you would like to reset, select **Yes**.

Resetting Favourites

1. From the Security Menu display (See “Accessing the Security Menu” on page 54), select **Erase/Reset**.
2. Select **Reset Favourites**.
3. Press **OK** (left softkey) to continue.
4. If you are certain you would like to reset, select **Yes**.

Resetting Default Settings





1. From the Security Menu display (See “Accessing the Security Menu” on page 54), select **Erase/Reset**.
2. Select **Default Settings**. (A disclaimer appears.)
3. Press **OK** (left softkey) to continue.
4. If you are certain you would like to reset, select **Yes**.

4. Roaming

Understanding Roaming

Recognizing Icons on the Display Screen

Your phone's display screen always lets you know when you're off the home network and whether your phone is operating in analog or digital mode. The following chart indicates what you'll see depending on where you're using your phone.

Network	Indicator
Digital Home	
Analog Home	
Digital Roaming	
	Digital Roam
Analog Roaming	
	Analog Roam

Roaming on Digital Networks

When you're roaming on digital networks, your call quality and security will be similar to the quality you receive when making calls on the home network. You may not be able to access certain features.

Roaming on Analog Networks

When you roam on analog networks, you will experience a similar quality provided by other analog carriers today. Although some features will be unavailable, you can still make and receive calls. You will experience a few differences:

- ▶ You are more likely to experience cross-talk, fade-out, and dropped calls.
- ▶ Some features which are standard on the home network are unavailable.
- ▶ There are security and privacy risks (eavesdropping and cloning) that exist with conventional analog services today.
- ▶ Your battery needs recharging sooner when you use your phone for analog roaming.


Note: If you're on a call when you leave the home network and enter an area where roaming is available (whether digital or analog), your call is dropped. If your call is dropped in an area where you think service is available, turn your phone off and on again to reconnect to the home network.

Note: When using your phone in analog mode, the handset may feel warm. This behaviour is normal for analog operation.

Setting Your Phone's Roam Mode

Your phone allows you to control your ability to roam. By using the **Roaming** menu option, you can determine which signals your phone accepts.

To choose from four different settings on your dual band/tri mode phone to control your roaming experience:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Others**.
4. Select **Roaming**.
5. Select an option.
 - ▶ **Automatic:** This setting seeks Service. When Service is unavailable, the phone searches for an alternate system.
 - ▶ **Home Only:** This setting allows you to access the home network only and prevents roaming on other networks.
 - ▶ **Digital Only:** This setting forces the phone to seek a digital system.
 - ▶ **Analog Only:** This setting forces the phone to seek an analog system.

5. Menu Navigation

Viewing the Menus

Menu Diagram

Menus let you check or change your phone settings. The following outline shows your phone's menu structure.

1. Missed Alerts

2. Call History

1. Outgoing
2. Incoming
3. Missed
4. Recent Calls
5. Erase History

3. Contacts

1. Find/Add Entry
2. Group
3. Speed Dial #s
4. My Phone#
5. Services

4. Messaging

1. Send Message
2. Text
3. Picture Msg
4. Web Alerts
5. Voicemail

5. My Content

- Games
- Ringers
- Screen Savers
- Applications
- Dynamic 1-11 (If applicable)
- Others (If applicable)

6. Pictures

1. Camera
2. My Pictures
3. Online Albums
4. Settings & Info

7. Web

8. Tools

1. Voice Services
2. Bluetooth
3. Calendar
4. Alarm Clock
5. Countdown
6. Stop Watch
7. World Clock
8. Calculator


9. Settings

1. Sounds
2. Display
3. Internet
4. Location
5. Bluetooth
6. Messaging
7. Security
8. Others
9. Phone Info

6. Managing Call History

Viewing History

You'll find the Call History feature very helpful. It is a list of the phone numbers (or Contacts entries) for calls you placed, accepted, or missed. Call History makes redialing a number fast and easy. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

1. Press  to access the main menu.
2. Select **Call History**.
3. Select **Outgoing**, **Incoming**, **Missed**, or **Recent Calls**.
4. Select the entry you wish to view.

Tip: The icons next to the name in the Recent Calls list represent the status of the call history:

 for outgoing calls,  for Incoming calls, and  for Missed calls.

Call History Options

For additional information and options on a particular call, highlight a Call History entry and press **Options** (right softkey).

- ▶ **Call** to dial the phone number.
- ▶ **Call:Speaker On** to dial the phone number in speakerphone mode.
- ▶ **Send Message** to send a text, or picture message. See page 95 or 112 for details.
- ▶ **Save Phone#** to save the phone number (if applicable). If the caller's phone number is already saved in your Contacts list, **Go to Phone Book** appears. (See "Saving a Phone Number From Call History" on the page 64.)
- ▶ **Prepend** to add numbers to the beginning of the phone number. (See "Prepending a Phone Number From Call History" on page 65.)
- ▶ **Erase** to erase the entry.

Making a Call From Call History

1. Press **MENU OK** to access the main menu.
2. Select **Call History**.
3. Select **Outgoing**, **Incoming**, **Missed**, or **Recent Calls**.
4. Select the entry you want to call.
5. Press **TALK** or **SPEAKER**.
– or –
Press **Options** (right softkey), select **Call** or **Call:Speaker On**.

Note: You cannot make calls from Call History to entries identified as No ID or Restricted.

Saving a Phone Number From Call History

1. Press **MENU OK** to access the main menu.
2. Select **Call History**.
3. Select **Outgoing**, **Incoming**, **Missed**, or **Recent Calls**.
4. Highlight the call history entry you want to save.
5. Press **Options** (right softkey) to display the options.
6. Select **Save Phone#**.
7. Select the appropriate label.
8. Select **New Name** or **From Ph. Book** to enter a name.
 - ▶ **New Name** to enter a name directly.
 - ▶ **From Ph. Book** to select a name from the Contacts entry list.
9. Press **Save** (left softkey).

Note: You cannot save phone numbers already in your Contacts list or from calls identified as No ID or Restricted.

Prepending a Phone Number From Call History

If you need to make a call from Call History and you happen to be outside your local area code, you can add the appropriate prepending by following these steps:

1. Press **MENU OK** to access the main menu.
2. Select **Call History**.
3. Select your desired Call History entry and press **Options** (right softkey).
4. Select **Prepend**.
5. Enter the digits you want to add to the number.
6. Press **TALK** or **SPEAKER** to place a call.

Erasing Call History


1. Press **MENU OK** to access the main menu.
2. Select **Call History**.
3. Select **Erase History**.
4. Select **Outgoing, Incoming, Missed, Recent Calls, or All**.
5. Select **Yes**.

7. Contacts Directory

Displaying the Contacts List



- ▶ Press the navigation key right.

– or –

1. Press  to access the main menu.
2. Select **Contacts**.
3. Select **Find/Add Entry**.





Adding a New Contacts Entry

Your phone can store up to 500 Contacts entries. Contacts entries can store up to a total of 700 phone numbers and each entry's name can contain 32 characters.









1. Press the navigation key right to display the Contacts list.
2. Select **<Add Contact>**.
3. Enter a name for the entry and press the navigation key down.
4. Enter the phone number and press .
5. Select a label for the entry and press .
6. Press **Save** (left softkey).

Assigning a Group Entry

To add a group name:

1. Press  to access the main menu.
2. Select **Contacts**.
3. Select **Group**.
4. Select an unassigned number and press  (right softkey).
5. Enter the group name and press .
6. Scroll down to the **Ringer** or **Picture ID** to assign a ringer type or image.
7. Press  (left softkey) to save.

To assign a contact to a group:


1. Press the navigation key right.
2. Select your desired contact and press .
3. Press  (right softkey) and select **Edit** or press  (right softkey) if you are selecting an email address or URL.
4. Scroll down to the box next to the  icon and press .
5. Select a group from the Group list and press  or  (left softkey).
6. Press  (left softkey) to save.

Finding Contacts List Entries


There are several ways to display your Contacts entries: by name, by speed dial number, and by Voice tags. Follow the steps outlined in the sections below to display entries from the Contacts list menu.

Finding Names

To find Contacts list entries by name:




1. Press the navigation key right to display the Contacts list.
2. Scroll through all the entries using your navigation key.
– or –
Enter the first letter of the person's name.
3. To display the entry's details, select your desired entry and press .

Finding Speed Dial Numbers

1. Press  to access the main menu.
2. Select **Contacts**.
3. Select **Speed Dial #s**. (The Speed Dial numbers list appears.)

Finding Group Entries

To find entries designated as part of a group:

1. Press the navigation key right.
2. Press the navigation key up to select **All Entries** field.
3. Press the navigation key right or left to navigate through the group to find the desired entry. (The display shows the group entries of the selected group.)
4. To display an entry's details, select the entry and press .
5. To make the call, highlight your desired number and press 
or .

Contacts List Options

To access Contacts list options, display the Contacts List, highlight an entry, and press **Options** (right softkey). Options available may include:

- ▶ **Select Group** to choose a group entry.
- ▶ **Set Secret** to make an entry secret.
- ▶ **Erase Contact** to erase a contact.
- ▶ **Add Contact** to add a new contact.
- ▶ **Edit Group** to edit the group entry.
- ▶ **Thumbnail** or **List** to switch between Thumbnail or List display mode.
- ▶ **Send Contact** to send a Contacts entry in the Contacts list to another Bluetooth device. (See page 125.)

Contacts Entry Options

To access a Contacts entry's options, highlight an entry and press **MENU OK**. Then select a phone number and press **Options** (right softkey).

- ▶ **Edit** to edit your desired label.
- ▶ **Call** to dial the phone number.
- ▶ **Call:Speaker On** to dial the phone number in speakerphone mode.
- ▶ **Send Message** to send a text or picture message. (See page 95 or 112 for details.)
- ▶ **Call Alarm** to set a call alarm to the entry (see page 76).
- ▶ **Set Speed Dial** to set the Speed Dial to the entry (see page 71).
- ▶ **Set Voice Tag** to set a Voice tag for the entry (see page 86).
- ▶ **Prepend** to alter a phone number by adding numbers to the beginning of the entry. (See "Prepending a Phone Number From Call History" on page 65.)
- ▶ **Send Contact** to send a Contacts entry to another Bluetooth device. (See page 125.)

Editing a Contacts Entry

1. Press the navigation key right.
2. Select the entry you wish to edit.
3. Highlight a phone number, press **Options** (right softkey), select **Edit**.
– or –
Highlight an email address or Web address and press **Edit** (right softkey).
4. Select the field you want to edit.
5. Edit the entry by using your keypad and press **MENU OK**.
6. Press **Save** (left softkey) to save your changes.


Erasing a Contacts Entry From the List

1. Press the navigation key right.
2. Highlight the entry you wish to delete using the navigation key.
3. Press **Options** (right softkey).
4. Select **Erase Contact**.
5. Select **Yes**.

Assigning Speed Dial Numbers



With this feature you can dial Contacts Directory entries with one key press for locations 2-9. Save your memory locations 2-9 for speed dialing your most commonly used phone numbers. Speed Dial numbers must be stored in your Contacts to use this feature.

To set Speed Dial:

1. Press  to access the main menu.
2. Select **Contacts**.
3. Select **Speed Dial #s**.
4. Select an available speed dial location.
5. Select an entry from the list.
6. Select the phone number you want to set as a speed dial number.

Note: When you select an assigned number, you'll be asked whether you want to overwrite the assigned number. Select **Yes** to overwrite or **No** to cancel. To delete the previous speed dial assignment select **Reset**.

– or –

1. Press the navigation key right.
2. Scroll to your desired entry in the Contacts list and press .
3. Select the phone number you want to set as a speed dial number and press **Options** (right softkey).
4. Select **Set Speed Dial**.
5. Select an available speed dial location and press .


To use Speed Dial:

- From standby mode, just press and hold the appropriate key.


Selecting a Ringer/Image Type for an Entry

You can assign a ringer/image type to a Contacts entry so you can identify the caller by the ringer or image type.

To select a ringer type for an entry:

1. Press the navigation key right.
2. Select the entry you want to set.
3. Highlight a phone number, press **Options** (right softkey), select **Edit**.
– or –
Highlight an email address or Web address, and press **Edit** (right softkey).
4. Scroll down to the box next to the  icon and press **MENU OK**.
5. Select your desired ringer type and press **MENU OK**.
6. Press **Save** (left softkey).

To select an image type for an entry:

1. Follow steps 1-3 above.
2. Press the navigation key up to highlight the  icon and press **MENU OK**.
3. Select your desired image type and press **MENU OK**.
4. Press **Save** (left softkey).

Secret Contacts Entries

You can hide an entry's phone number(s) by making them secret, which requires your lock code to edit the entry. The entry name is still displayed, but the entry's phone numbers are replaced by "<Secret>".

1. Press the navigation key right.
2. Scroll to the Contacts entry you want to tag as Secret.
3. Press **Options** (right softkey) to display the menu options.
4. Select **Set Secret**.
5. Enter the 4-digit lock code.
6. Select **On** or **Off**.

Tip: If you can't recall your lock code, try using the last four digits of your phone number, or 0000.

Dialing Services

You must be in digital mode to access services.

1. Press **MENU OK** to access the main menu.
2. Select **Contacts**.
3. Select **Services**.
4. Select **Customer Service** or **Dir Assistance**.
5. Press **TALK** or **SPEAKER**.


8. Personal Organizer

Managing Schedules



Calendar


Use the Calendar to remind you of events or important calls you need to make. You can schedule up to 100 events, 15 Call Alarms and 20 To Do Items.

Displaying Your Calendar

1. Press  to access the main menu.
2. Select **Tools**.
3. Select **Calendar**.

Adding an Event to the Scheduler

1. From the Calendar display, highlight the day you want to add an event by using the navigation key.
2. Press  (right softkey) to display the options.
3. Select **Add Event**.
4. Select **Schedule**.
5. Enter the description and press .

Tip: While entering the description you can also press  (right softkey) to select a description from "From To Do List." (You need to store entries in the To Do List. See "Adding To Do Items" on page 78 for details.)

6. Enter other fields if necessary:
 - ▶ **From** Scheduling the start time.
 - ▶ **To** Scheduling the end time.
 - ▶ **Location** Editing the location of your event (up to 14 characters).
 - ▶ **Alarm** Select the ringer you wish to set.

- ▶ **Alarm Time** Editing the alarm time (number of hours or minutes before the event starts). Default alarm time is 10 minutes.
- ▶ **Repeat** Setting the event's repeating status.

7. Press **Save** (left softkey) to schedule the event.

Tip: Press the navigation key up or down to scroll by week through the calendar, and the Side Volume key to scroll by month.

Tip: The date you have scheduled events for is indicated by "▶".

Event Alerts

There are several ways your phone alerts you of scheduled events.


- ▶ By playing the alert tone (depending on the Ringer Type and Ringer Volume setting).
- ▶ By blinking the LED.
- ▶ By displaying the event's description on the Main LCD or Sub LCD.
- ▶ By lighting the LCD backlight (depending on the backlight setting).

Event Alert Menu




When you have an event alarm scheduled, your phone alerts you and displays the event summary.

- ▶ Press any key to stop the alarm. (The alarm will stop and then sound again after the selected snooze interval.)
 - Press and hold the side camera key to cancel snoozing.
 - Press **Dismiss** (right softkey) to dismiss the event.

Viewing Events

1. Press  to access the main menu.
2. Select **Tools**.
3. Select **Calendar**.
4. Select the date for which you set events. (The selected day's events list will display.)

Adding a Call Alarm to the Scheduler

1. From the Calendar display, select the day you want to add an event by using the navigation key.
2. Press  (right softkey) to display the options.
3. Select **Add Event**.
4. Select **Call Alarm**.
5. Enter the phone number directly or press  (right softkey) for the following options:
 - ▶ **From Ph. Book** select the number from your Contacts list.
 - ▶ **Voicemail** select the number for voicemail access.
6. Select the box under the following items:
 - ▶ **Time/Date** Editing the start time/date.
 - ▶ **Alarm** Selecting the ringer alarm.
 - ▶ **Repeat** Setting the Call Alarm's repeating status.
7. Press  (left softkey).

Call Alarm Menu

When you have scheduled a call alarm, your phone alerts you and displays the name or phone number.

To respond to a call alarm:

- ▶ Press **TALK** or **SPEAKER** to dial the phone number (if applicable).

Other options available include:

- ▶ Press any key to silence the alarm.
- ▶ Press and hold the side camera key to cancel snoozing.
- ▶ Press **Dismiss** (right softkey) to dismiss the call alarm.

Erasing a Day's Event or Call Alarm

1. From the Event list display, highlight one of the events or call alarms and press **Options** (right softkey).
2. Select **Erase Event**.
3. Select **Yes**.

Viewing a Future/Past Day's Scheduled Events

1. From the Event list display, press **Options** (right softkey).
2. Select **Go To Date**.
3. Enter the date by using numeric keys and the navigation key and press **MENU OK** or **OK** (left softkey).

Adding To Do Items

Your phone can store and manage 20 To Do items.

1. From the Calendar display, press **Options** (right softkey).
2. Select **To Do List**.
3. Press **Options** (right softkey).
4. Select **Add Item**.
5. Enter the description and press **MENU OK**.
6. Select **Priority** to edit the To Do's priority.
7. Press **Save** (left softkey).

Adding a To Do Item to the Schedule

1. From the To Do List display, highlight the item you want to add to schedule and press **Options** (right softkey).
2. Select **Add To Schedule**.
 - ▶ **Add To Schedule** copies the item from the To Do list and makes it a scheduled event.
3. Enter the description using your keypad and press **MENU OK**. (See "Adding an Event to the Scheduler" on page 74 for entering.)
4. Press **Save** (left softkey).

Purging All Events, Call Alarms or To Do List Items

1. From the Event list display, press **Options** (right softkey).
2. Select **Erase Memory**.
3. Select one of the following Option items.


Options:

- ▶ **Erase Old** deletes the old events, call alarms, and completed To Do items.
 - ▶ **Erase All** deletes all the events, call alarms, and To Do items.
4. Select **Yes**.


Displaying Phone Information

1. Press **MENU OK** to access the main menu.
2. Select **Settings**.
3. Select **Phone Info**.
4. Select **My Phone#**.


Finding Icon Definition

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Phone Info**.
4. Select **Icon Glossary**.
5. Select the item for which you want to see the explanation.

Displaying the Version Information

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Phone Info**.
4. Select **Version**.








Displaying Advanced Information

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Phone Info**.
4. Select **Advanced**.

Using Your Phone's Tools


Setting the Alarm Clock

To set the alarm clock:

1. Press  to access the main menu.
2. Select **Tools**.
3. Select **Alarm Clock**.
4. Press  (left softkey) to continue.
5. Select an Alarm Clock entry you want to use and press .
6. Select the box under the following items.
 - ▶ **Description** to enter a description of the alarm.
 - ▶ **Time** to enter the alarm time. Enter the desired alarm time and press .
 - ▶ **Repeat** to select the alarm frequency. Select **Once** to set your alarm once or **Daily** to set your alarm daily.
 - ▶ **Alarm** to set the alarm on or off.
7. Press  (left softkey) to save the alarm settings.
8. Press  (right softkey), and then use your keypad and/or navigation key to set the **Ringer Length**, **Snooze Interval** or **Snooze Times**.
9. Press  (left softkey).

Note: Alarm will not sound when the phone is powered off.






To stop the alarm:

- ▶ Press any key to stop the alarm.
- ▶ Press and hold the side camera key to cancel the snooze setting.
- ▶ Press  (right softkey) to dismiss the alarm.

Note: In a no-service area or an analog service area, it's necessary to set the actual time and date to use the Alarm Clock function.

Using the Countdown Timer




This feature allows you to use the countdown timer with alarm capabilities. You can set up to 5 timers.

1. Press  to access the main menu.
2. Select **Tools**.
3. Select **Countdown**.
4. Select a number and the following items.
 - ▶ **Description** to enter a description of the countdown.
 - ▶ **Time** to enter the countdown time. Enter the desired time and press .
 - ▶ **Alarm** to set the countdown alarm on or off.
5. Press  (left softkey) to save the countdown settings.
6. Press  (right softkey) to set the **Ringer Length**, **Snooze Interval**, or **Snooze Times**.
7. Press  (left softkey) to save.

Tip: Press the left softkey (**On** or **Off**) to toggle between countdown alarm on and off.


Tip: This feature is not available while your phone is turned off.




Using the Calculator

1. Press  to access the main menu.
2. Select **Tools**.
3. Select **Calculator**.
4. Enter numbers using your keypad. Press the left softkey to insert a decimal point.
5. Press the appropriate navigation key for an arithmetic option. (Up for addition, Down for subtraction, Left for multiplication, Right for division)
6. Enter numbers and press  for the result.
 - ▶ To clear the numbers, press  (right softkey).

Using the World Clock

This feature is available only in digital areas.

1. Press  to access the main menu.
2. Select **Tools**.
3. Select **World Clock**.
4. The World Clock display appears.
 - ▶ Press the navigation key right or left for changing city or country.

Tip: Press  (left softkey) or  (right softkey) for changing between summer and standard time, if applicable. The  icon is shown while summer time is displayed.

Using the Stop Watch

To start the stop watch:

1. Press **MENU OK** to access the main menu.
2. Select **Tools**.
3. Select **Stop Watch**.
 - ▶ Press **Start** (left softkey) to start the stop watch.
 - ▶ Press **Stop** (left softkey) to stop the stop watch.
 - ▶ Press **Resume** (left softkey) to start the stop watch again.

To record a lap time while the stop watch is running:

- ▶ Press **Lap** (right softkey) to record time of first lap.
- ▶ Press **Lap** (right softkey) again to record next lap. (Up to 5 lap times can be displayed. If you continue recording, lap times will be deleted from the oldest.)

To display the stop watch options:

1. From the stop watch display, press **Options** (right softkey).
2. Select an option.
 - ▶ **Go to Lap List** to display a saved Lap List. Press **Detail** (left softkey) to display the lap list details.
 - ▶ **Save to Lap List** to save the recorded lap times. (Available when you stop the lap in stop watch operation.)
 - ▶ **Reset** to reset the time to zero and clear any recorded lap times.

9. Voice Services

Using Voice-Activated Dialing

You can use a Voice tag to automatically dial a phone number in your Contacts list. Your phone can store up to 30 Voice tags.

Note: Please set the Voice Prompt feature (see page 31) to on before using the Voice-Activated Dialing so that you can hear the voice instruction from the phone. The default setting is off.

With the flip open:


1. Press **TALK** or **SPEAKER** briefly.
2. Follow the voice prompts and recite the entry's Voice tag into your phone's microphone.

With the flip closed:

1. Press and hold **CALL** up or down.
2. Follow the system prompts and recite the entry's Voice tag into your phone's microphone.


Note: To use this feature, you must have stored entries (see "Programming Voice Tag to Your Phone" on page 86).

Programming Voice Tag to Your Phone

1. Press the navigation key right.
2. Select a contact and press .
3. Press **Options** (right softkey).
4. Select **SetVoiceTag**.
5. Select **Add**.
6. The phone will prompt you to say the name you want to program. Wait for the beep and then say the name.
7. Respond to the prompt by repeating the name after the beep. (The display shows “Voice Tag Recorded”.)

Note: Record Voice tags in a quiet environment and without the aid of an accessory.

Voice Tag Options


1. Press the navigation key right.
2. Select a contact and press .
3. Press **Options** (right softkey).
4. Select **SetVoiceTag**.
5. Select an option from the following.
 - ▶ **Play** to play the recorded Voice tag.
 - ▶ **Play:Speaker** to play the recorded Voice tag in speakerphone mode.
 - ▶ **Change** to change the recorded Voice tag.
 - ▶ **Erase** to erase the Voice tag.

Managing Voice Memos

You can use your phone's Voice Services to record brief memos during a call.

Recording Voice Memos


To record a voice memo:

1. Press  to access the main menu.
2. Select **Tools**.
3. Select **Voice Services**.
4. Select **Voice Memo**.
5. Select **Record** or **Record:Speaker**.
6. Start recording after the beep.




To end the recording of your memo:

- Press , , or .

To record the other party's voice during a phone call:

1. During a call, press  (right softkey).
2. Select **Tools**.
3. Select **Voice Services**.
4. Select **Voice Memo**.
5. Select **Record**.
6. Start recording after the beep.

To end the recording of voice memo:

- Press  or  while recording.
- or –
- Press  and disconnect the call when recording in Use State.

Recording also stops when the other party hangs up the call.

- Memo recording during a phone call is disabled while you are roaming in analog service areas.

- ▶ When the recording capacity is full, highlight an old memo, press **Erase** (left softkey), select **Yes** to make room for additional memos.

Note: Your phone can store up to 12 memos and the total available recording time is 72 seconds (maximum of 18 seconds per memo).


Reviewing Voice Memos

1. Press **MENU OK** to access the main menu.
2. Select **Tools**.
3. Select **Voice Services**.
4. Select **Voice Memo**.
5. Select **Play** or **Play:Speaker**.
6. Select one memo from the list and press **MENU OK**.
– or –
If you want to play all memos continuously, select **All**.
7. Press **MENU OK** to stop playing.
 - ▶ You can change the message playing speed by pressing **Slow** (left softkey) or **Fast** (right softkey).
 - ▶ To play the newer/older memo, press the navigation key left or right.


Tip: To set the speakerphone mode on or off, press **Options** (right softkey), select **Speaker On/Off** during step 6 above.

Erasing Voice Memos

To erase all voice memos:

1. Press  to access the main menu.
2. Select **Tools**.
3. Select **Voice Services**.
4. Select **Voice Memo**.
5. Select **Erase All**.
6. Select **Yes**.

To erase an individual memo:

1. Follow steps 1-4 above.
2. Select **Play** or **Play:Speaker**.
3. Display the memo list, highlight the memo you want to erase, and press  (right softkey).
4. Select **Erase**.
5. Select **Yes**.

Setting Up Screen Call


This feature enables you to screen incoming calls by using a recorded announcement, either one that is pre-recorded or one that you record.

Activating Screen Call

To start Screen Call when you have incoming calls:


1. When the phone rings or vibrates, press **Options** (right softkey) to display the options.
2. Select **Screen Call**.

To set Auto Screen Call:







1. Press **MENU OK** to access the main menu.
2. Select **Tools**.
3. Select **Voice Services**.
4. Select **Screen Call**.
5. Select **Auto**.
6. Select **On**.
- ▶ If you want to change the answer time, enter your desired number by using numeric keys or pressing the navigation key up or down.
7. Press **MENU OK** or **OK** (left softkey). The  icon is displayed on the Standby display.

Tip: While the caller is recording: Pressing **END/O** stops recording and disconnects the call. Pressing **TALK** answers the call.






Selecting an Announcement for Screen Call

1. Press  to access the main menu.
2. Select **Tools**.
3. Select **Voice Services**.
4. Select **Screen Call**.
5. Select **Announcement**.
6. Depending on your preference, select **Pre-Recorded** or **Custom**.



Recording Name for a Pre-Recorded Announcement

1. Press  to access the main menu.
2. Select **Tools**.
3. Select **Voice Services**.
4. Select **Screen Call**.
5. Select **Announcement**.
6. Highlight **Pre-Recorded** and press  (right softkey).
7. Select **Record Name**.
 - ▶ If your name has already been recorded, select **Yes** or **No** for overwriting.
8. Press  to start the 1st recording. (The maximum recording time is 12 seconds.)
9. Press  to stop recording.
10. After the 1st recording, press  again to start the 2nd recording.
11. Press  to stop recording.

Recording a Customized Announcement

1. Follow steps 1-5 on page 91.
2. Highlight **Custom** and press  (right softkey).
3. Select **Record**.
 - ▶ If your announcement has already been recorded, select **Yes** or **No** for overwriting.
4. Press  to start the 1st recording. (The maximum recording time is 12 seconds.)
5. Press  to stop recording.
6. After the 1st recording, press  again to start the 2nd recording.
7. Press  to stop recording.

Reviewing an Announcement

1. Press  to access the main menu.
2. Select **Tools**.
3. Select **Voice Services**.
4. Select **Screen Call**.
5. Select **Announcement**.
6. Highlight **Pre-Recorded** or **Custom** and press  (right softkey).
7. Select **Play** or **Play:Speaker**.

Erasing an Announcement

1. Follow steps 1-6 above.
2. Select **Erase Name** to erase the name for a pre-recorded announcement.
 - or -
 - Select **Erase** to erase the customized announcement.
3. Select **Yes**.

10. Messaging


New Messages

When you receive a text/picture message or a Web Alert, it will automatically appear on your phone's main display screen. Use your navigation key to scroll down and view the entire message.

To read a message:

- ▶ Press **Call** (left softkey) to dial the phone number. (Appears when a callback number is highlighted.)
- ▶ Press **Reply** (left softkey) to reply to the message. (Appears when a phone number or email address is highlighted.)
- ▶ Press **Go** (left softkey) to go to the website. (Appears when a URL is highlighted.)
- ▶ Press **Forward** (left softkey) to forward the message. (Appears only if there are no phone numbers and URLs in the message.)
- ▶ Press **Options** (right softkey) to display options.



Note: When there are more than two notifications, a Missed Alerts list is displayed in standby mode. Select a text/picture message in the list and press **View** (left softkey) to display the message details.

Note: When you receive a new text message, the message notification and the icon  will appear.




Note: When you receive a new picture message, the icon  will appear.

Displaying Messages



To display a text message from the main menu:

1. Press  to access the main menu.
2. Select **Messaging**.
3. Select **Text**.
4. Select **Inbox**, **Sent Mail**, **Pending**, **Drafts**, or your defined folder.
5. Select the header of the message you want to see. (To display the message options, press  [right softkey].)

To display a picture message from the main menu:


1. Press  to access the main menu.
2. Select **Messaging**.
3. Select **Picture Msg**.
4. Select your desired picture message and press .
5. Press  (left softkey) to display the picture message.
(The browser will start and display the picture message.)

To display Web Alerts:

1. Press  to access the main menu.
2. Select **Messaging**.
3. Select **Web Alerts**.
4. Select the header of the message you want to see. (To display the web alerts options, press  [right softkey].)

To read other messages:

- ▶ Press the navigation key right to read the next message.
- ▶ Press the navigation key left to read the previous message.

Note: Web Alerts include URLs etc. When you buy a ringer or image through your computer for your phone, your phone will receive Web Alerts. Press  (left softkey) to go to the website and follow steps to download it to your phone.

Sending a Text Message

1. Press **MENU OK** to access the main menu.
2. Select **Messaging**.
3. Select **Send Message**.
4. Select **Text**.
5. Select the entry method you prefer:
 - ▶ **Phone Book Entry** to select a recipient from your internal Contacts. (Qualifying Contacts entries must contain a phone number or an email address.)
 - ▶ **Phone#** to enter the phone number of the person to whom you wish to send a message.
 - ▶ **Email** to enter the recipient's email address.

Tip: Press **Others** (right softkey) and select **From Recent List** or **Phone Book Groups** to use phone numbers or email addresses from recently used or phone book groups entries.








 
6. Press **MENU OK** to confirm the recipient. (You may include up to 16 recipients per message.)
7. Press **Next** (left softkey) when you have finished selecting and entering recipients.
8. Compose a message and press **MENU OK** or **OK** (left softkey).
 - ▶ To enter a message, use your keypad to type your message. Press **Mode** (right softkey) to select a character input mode. (See "Selecting a Character Input Mode" on page 25.)
9. Scroll down to select the message priority (**Normal** or **Urgent**), set the callback number, and/or set the signature.
10. Review your message and press **Send** (left softkey). (You may also select additional messaging options by pressing **Options** [right softkey] to change the recipients or save to draft.)

Tip: You can also send a text message by using the Send Quick Text menu. (Press the navigation key up in standby mode.)


Creating Folders for Messages

You can create up to ten folders to store your Messages. When 10 of your defined folders exist, the “Create Folder” option will not appear.



To create a new folder:

1. Press  to access the main menu.
2. Select **Messaging**.
3. Select **Text**.
4. Press  (right softkey).
5. Select **Create Folder**.
6. Enter a folder name and press  or  (left softkey).
 - ▶ Pressing  (left softkey) allows you to save the folder name.
7. If you want the message to be filed into the folder automatically, select **Auto Filing**.
8. Select **On**.
9. Select the box under **Keyword** by scrolling down.
10. Enter a keyword and press  or  (left softkey).
11. Press  (left softkey).

To set an optional feature for the added folder:




1. During step 9 above, scroll down to select other menu options. Select each item.
 - ▶ **Notify** to set the display notification to on or off when you have an unread message matching the defined folder.
 - ▶ **Envelope Icon** to set the envelope icon display to on or off when you have unread message matching the defined folder.
2. After selecting each setting, press  (left softkey).

Erasing Messages

1. Press  to access the main menu.
2. Select **Messaging**.
3. Select **Text**.
4. Select **Inbox**, **Sent Mail**, **Pending**, **Drafts**, or your defined folder.
5. Select a message you want to erase and press  (right softkey).
6. Select **Erase**.
7. Select **This Message**.

Tip: To erase all messages, select **All Messages** during step 7 above.

Erasing Selected Messages in All Folders


1. Open any message folder. (Follow steps 1-4 above.)
2. Press  (right softkey).
3. Select **Erase**.
4. Select **Multiple**.
5. Press  (left softkey) to check the appropriate box(es).
6. After selecting the boxes, press  (right softkey).
7. Select **Yes** to erase selected messages.


11. Using Your Phone's Camera



Taking Pictures

Taking pictures with your phone's built-in camera is as simple as choosing a subject, pointing the lens, and pressing a button. You can activate the phone's camera mode whether the phone is open or closed.

To take a picture with the phone open:

1. Press  to access the main menu.
2. Select **Pictures**.
3. Select **Camera** to activate camera mode. (Additional camera options are available through the camera mode **Options** menu. See "Camera Mode Options" on page 100 for more information.)

Shortcut: To activate camera mode, you can also press  twice or press and hold the side camera key.



4. Using the phone's main LCD as a viewfinder, aim the camera lens at your subject.
5. Press **Capture** (left softkey), , , or the side camera key until the shutter sounds. (The picture will automatically be saved in the In Camera folder.)
6. Press **Next** (right softkey) for more options:
 - ▶ **Take New Picture** to return to camera mode to take another picture.
 - ▶ **Send** to send the picture to up to 16 contacts at one time. (See page 112 for details.)
 - ▶ **Upload** to upload the picture you just took to the online picture messaging web site. Depending on your settings, you may be prompted to accept an Internet connection.
 - ▶ **Set as** to assign the picture. Select your desired option.
 - ▶ **Details/Edit** to edit or display your picture's details.
 - ▶ **Delete** to delete the picture you just took.
 - ▶ **Pictures In Camera** to go to the In Camera folder to review your saved pictures.

To take a picture with the phone closed:

1. Press and hold the side camera key to activate camera mode.
2. Point the camera lens at your subject.
3. Press the side camera key to take the picture. (The picture will automatically be saved in the In Camera folder.)

Creating Your Online Picture Messaging Password

The first time you use any of the picture management options involving the online picture messaging web site, you will need to establish an online picture messaging password through your picture messaging phone. This password will also allow you to sign in to the online picture messaging web site at <http://pics.solomobile.ca> to access and manage your uploaded pictures and albums.

1. Press  to access the main menu.
2. Select **Pictures**.
3. Select **Online Albums**.
4. Select **View Albums**. (You will be prompted to create an online picture messaging password.)
5. Enter a four- to eight-digit password and press .
6. Please wait while the system creates your account.

Tip: Write down your online picture messaging password in a secure place.

Once you have received confirmation that your account has been successfully registered, you may upload and share pictures and access the online picture messaging web site.

Camera Mode Options

When the phone is open and in camera mode, press **Options** (right softkey) to display additional camera options:

- ▶ **Picture Mode** to select picture mode from **Normal**, **Beach/Snow**, **Scenery**, **Night/Dark**, or **Soft Focus**.
- ▶ **Zoom** to zoom in on a subject. You can adjust the zoom from 1x to 20x, depending on your resolution settings. (See “Using the Zoom” on page 102 for details.)

Note: Zoom is not available when the resolution setting is High. (See “Selecting Camera Settings” on page 103 for details.)

- ▶ **Self-Timer** to activate the camera’s timer. (See “Setting the Self-timer” on page 101 for details.)
- ▶ **Fun Tools** to select an option from the following:
 - **Multiple Shots** to shoot multiple shots on multiple targets.
 - **Stitch Shot** to take a stitch shot by stitching separate images together (see page 102).
 - **Fun Frames** to select your favourite fun picture frame to decorate your picture.
 - **Color Tone** to select a wide variety of color tones for the picture.
- ▶ **Image Controls** to select an option from **Brightness** or **White Balance**.
- ▶ **Camera Settings** to select your settings. (See “Selecting Camera Settings” on page 103 for details.)
- ▶ **Pictures In Camera** to go to your phone’s In Camera folder. (See “In Camera Folder” on page 106 for details.)
- ▶ **Key Guidance** to indicate the key functions in camera mode.
- ▶ **Favourite Settings** to select your favourite setting. (See “Setting Your Favourite Mode” on page 103.)

Setting the Self-timer

To activate the Self-timer:

1. From camera mode, press **Options** (right softkey).
2. Select **Self-timer**.
3. Select the length of delay you want the timer to use (**10 Seconds** or **5 Seconds**).
 - ▶ To deactivate the Self-timer, select **Off**.
4. Press **Start** (left softkey) when you are ready to start the timer. (⏱ appears on the main LCD during the Self-timer countdown.)
5. Get ready for the picture. (When the timer is down to three seconds, the Self-timer icon will turn red and the phone will begin to beep.)

To cancel the Self-timer after it has started:



- ▶ Press **Cancel** (right softkey).

Note: While the Self-timer is active, all keys are disabled except **END/⏻**, and **Cancel** (right softkey).

Taking Stitch Shots

Stitch shot allows you to stitch separate images together. With this feature, your phone's viewfinder is divided in two and you can shoot each part separately. When you shoot the first part, the camera displays a section of the first part, so you can line up the next picture with the first one.



To take a stitch shot:

1. From camera mode, press **Options** (right softkey).
2. Select **Fun Tools**.
3. Select **Stitch Shot**.
4. Select **Vertical** or **Horizontal**.
▶ Use your navigation key to switch the stitch display.
5. To take the first picture, press .
6. To take the second picture, press .

Using the Zoom

This feature allows you to zoom in on an object when you take a picture.


To use the zoom:

1. From camera mode, press the navigation key right or left, or the Side Volume key to adjust the zoom. (The gauge bar appears.)
2. Press **Capture** (left softkey), , , or the side camera key to take the picture. (The picture will automatically be saved in the In Camera folder.)

Note: The Zoom gauge will not appear when the resolution setting is High.

Setting Your Favourite Mode

With your phone, you can customize various camera settings. This feature allows you to save your favourite setting.

1. From camera mode, select your favourite setting. (See page 100 for Camera mode options and see “Selecting Camera Settings” shown below.)
2. Press **Options** (right softkey).
3. Select **Favourite Settings**.
4. Press the corresponding keypad number or highlight an unassigned number and press **Add** (right softkey).
5. Select **Yes**.
6. Enter a title and press  or **OK** (left softkey).

Selecting Camera Settings

1. From camera mode, press **Options** (right softkey).
2. Select **Camera Settings**.
3. Select one of the following options:
 - ▶ **Resolution** to select a picture's file size (**High-640x480**, **Medium-320x240**, or **Low-160x120**).
 - ▶ **Quality** to select the picture quality setting (**Fine**, **Normal**, or **Economy**).
 - ▶ **Shutter Sound** to select a shutter sound (**Default**, **Say “Cheez”**, or **Off**).
 - ▶ **Status Bar** to switch the status bar display on or off.


Using the Settings & Info Menu

The “Settings & Info” menu allows you to set Auto Delete or to view your account information.

Setting Auto Delete


With this feature, you can determine if you would like to automatically delete pictures from your phone to save memory after you have uploaded them to your online Picture Message account. (The default setting is Off.)

To set Auto Delete:

1. Press  to access the main menu.
2. Select **Pictures**.
3. Select **Settings & Info**.
4. Select **Auto Delete**.
5. Select **On** or **Off**.








 
 






Viewing Your Account Information

To view your account information:

1. Press  to access the main menu.
2. Select **Pictures**.
3. Select **Settings & Info**.
4. Select **Account Info**.

Viewing Your Camera's Status Area Display

Camera Icon Indicators

Function		Icons	Details
Picture Mode	Beach/Snow		Use this setting in bright light.
	Scenery		Use this setting for scenery from a distance.
	Night/Dark		Use this setting in low light.
	Soft Focus		Use this setting to "soften" the picture.
White Balance	Sunny		Use this setting for sunny weather.
	Cloudy		Use this setting for cloudy weather.
	Tungsten		Use this setting for standard household lighting.
	Fluorescent		Use this setting for fluorescent lighting.
	Manual		To set the white balance manually.
Brightness	Manual		To set brightness manually.
Multiple shots			Use this setting for multiple shots.
Resolution	High		For high picture resolution.
	Medium		For medium picture resolution.
	Low		For low picture resolution.
Self-Timer			Numeric countdown will appear when the self-timer has been activated.

Storing Pictures


There are two types of storage areas for your pictures that can be used separately according to your needs:

- ▶ **In Camera** (see below)
- ▶ **Saved to Phone** (see page 109)

In Camera Folder


The storage area of your phone is called the **In Camera** folder. From the In Camera folder, you can view saved pictures in your phone, send them to the online picture messaging web site, delete images, and access additional options.

To review your stored pictures in the In Camera folder:

1. Press  to access the main menu.
2. Select **Pictures**.
3. Select **My Pictures**.
4. Select **In Camera**.
5. Use your navigation key to view and scroll through the pictures.

In Camera Folder Options

When you are viewing the In Camera folder, press **Options** (right softkey) to display the following options:

- ▶ **Expand** to switch to the Expand view mode.
- ▶ **Thumbnail** to switch to the Thumbnail view mode.
- ▶ **Upload** to upload pictures from the In Camera folder to the online picture messaging web site. Depending on your settings, you may be prompted to accept an Internet connection. Choose from the following options:
 - **This** to upload the currently highlighted picture.
 - **Selected** to upload the selected pictures.
Press  to select a picture (the check box on the lower right corner will be marked).
 - **All** to upload all pictures in the In Camera folder.

Note: If this is the first time you have accessed the online picture messaging account, you will be prompted to create your online picture messaging password. See “Creating Your Online Picture Messaging Password” on page 99.

- ▶ **Set as** to assign the picture.
 - **Picture ID** to display the currently highlighted picture for incoming calls from a specific Phone Book entry or Group. Select the desired entry.
 - **Incoming Calls** to display the currently highlighted picture for incoming calls.
 - **Screen Saver** to display the currently highlighted picture as a screen saver.

Note: Pictures assigned as **Picture ID**, **Incoming Calls**, or **Screen Saver** will automatically be copied to the Saved to Phone folder.

- ▶ **Details/Edit** to display the following options:
 - **Special Effects** to apply special effects on your pictures. You can select from **Color Tone**, **Fun Stamps**, or **Rotate**.
 - **Text Caption** to edit the selected picture's caption.
 - **Picture Info** to display information such as the picture's caption, time/date, and resolution.
 - **Full Screen** to display the selected picture in full screen mode without any icons or Info Bar.
 - **Info Bar** to display the selected picture's information bar. (Expanded view only.)
 - **Sort by** to sort pictures by Name, Size, Date-Taken or Date-Uploaded. (Thumbnail view only.)
- ▶ **Slideshow** to view your pictures in slideshow mode. (Only available when two or more pictures are saved to the folder.)
- ▶ **Delete** to delete pictures in the In Camera folder. Select **This**, **Selected**, or **All**.

Note: Deleting pictures will free up memory space in your phone to enable you to take more pictures. Once deleted, the pictures cannot be uploaded to your online picture messaging account or saved to the Saved to Phone folder.

- ▶ **Save to Phone** to save the selected pictures in the Saved to Phone folder.
- ▶ **Go to Saved to Phone** to display the Saved to Phone folder.
- ▶ **Camera Mode** to activate Camera mode.

Saved to Phone Folder

When you assign a picture, it will automatically be saved in the **Saved to Phone** folder. The Saved to Phone folder allows you to store copies of pictures on your phone and to assign pictures to various phone tasks.


To save a picture to the Saved to Phone folder:

1. From the In Camera folder (see “In Camera Folder” on page 106), select a picture you wish to save to the Saved to Phone folder. (You may select multiple pictures.)

Tip: If there is no selected picture, the currently highlighted picture will be selected.

2. Press **Options** (right softkey).
3. Select **Save to Phone**. (A copy of the picture will be saved to the Saved to Phone folder.)




To view pictures stored in the Saved to Phone folder:

1. Press  to access the main menu.
2. Select **Pictures**.
3. Select **My Pictures**.
4. Select **Saved to Ph..** (Thumbnail pictures will display, up to nine pictures at a time.)
5. Use your navigation key to view and scroll through the pictures.

Sending Pictures


Once you've taken a picture, you can use the messaging capabilities of your phone to instantly share it with family and friends. You can send a picture to up to 16 people at a time using their email addresses or their mobile phone number (if compatible phone).

Sending Pictures From the In Camera Folder

1. Press  to access the Picture menu.
2. Select **My Pictures**.
3. Select **In Camera**.
4. Select a picture you wish to send and press . (The check box on the lower right corner will be marked. You can select multiple pictures.)
5. Press  (left softkey). (You will see a message on the display.)

Note: The first time you send a picture message, you will be prompted to establish an online picture messaging web site account and password. (See "Creating Your Online Picture Messaging Password" on page 99.)

6. Select **Recipients**.
7. Select one of the following options:
 - ▶ **Phone Book Entry** to select recipients from your Phone Book. Select a recipient.
 - ▶ **Phone#** to enter a mobile phone number directly.
 - ▶ **Email** to enter an email address directly.




Tip: Select  (right softkey) and then **From Recent List** or **Phone Book Groups** to use phone numbers or email addresses from recently used or phone book groups entries.

8. Press **Next** (left softkey) when you are finished adding recipients. (You may include up to 16 recipients per message.)
9. If you wish to include a text message, scroll to the text message field, and then enter your message using your keypad. (You can press **Mode** [right softkey] to change the input mode. See “Selecting a Character Input Mode” on page 25.)
10. If you wish to include a voice message with the picture, scroll to the audio field and press the appropriate softkey to record. (The maximum recording time is 10 seconds.)
11. Confirm the recipients, message, voice message, and picture.
12. Press the appropriate softkey to send the pictures.

Note: In the future, you may find names of third party photo or print services, etc. listed under **Recipients** in step 6 on page 110. You will be able to update the list by selecting **Update** when this particular service becomes available.

Sending Pictures From Messaging

You can also send picture messages from your phone's Messaging menu.

1. Press  to access the main menu.
2. Select **Messaging**.
3. Select **Send Message**.
4. Select **Picture**.
5. Select **From My Pictures** or **Online Albums**.
 - ▶ **From My Pictures:** The In Camera folder will display, with up to nine thumbnail pictures per screen.
 - ▶ **Online Albums:** A list of folders will display. Select your desired folder and press .
6. Use the navigation key to select the picture you wish to send. (You can select multiple pictures.)
7. Press  (left softkey). To complete and send the picture, follow steps 6-11 in "Sending Pictures From the In Camera Folder" on page 110.

Tip: To take and send a new picture from Messaging, select **Take Picture** during step 5 above, take the new picture, press  (right softkey), and follow steps 6-12 in "Sending Pictures From the In Camera Folder" on page 110.

Sending Online Picture Messages

To send pictures using the online Address Book:

1. From the online picture display, select a picture you wish to send and press **Send** (left softkey). (See “Managing Online Pictures From Your Phone” on page 114.)
2. Select **Recipients**.
3. Select **Online Address Book**.
4. Select a recipient or recipients (up to 10) from your Online Address Book.
5. Press **Done** (left softkey) when you are finished selecting recipients.
6. To include a text message, scroll to the message field and press the appropriate softkey. Enter your message and press **MENU OK**.
7. Confirm your recipients and attached data.
8. Press the appropriate softkey to send the online picture message.

Note: In the future, you may find names of third party photo or print services, etc. listed under **Recipients** in step 2 above. You will be able to update the list by selecting **Update** when this particular service becomes available.

To send an album from the online pictures menu:

1. From the online albums display, select an album you wish to send and press **Send** (left softkey). (See “Managing Online Pictures From Your Phone” on page 114.)
2. Follow steps 2-8 in “To send pictures using the online Address Book” above to complete and send a picture album.

Managing Picture Messages Online

Using the Online Picture Messaging Web Site

Once you have uploaded pictures from your phone to your online picture messaging account (see “In Camera Folder Options” on page 107), you can use your personal computer to manage your pictures. From the online picture messaging web site you can share pictures, edit album titles, add captions and organize images.



To access the online picture messaging web site:


1. From your computer's Internet connection, go to <http://pics.solomobile.ca>.
2. Enter your mobile phone number and online picture messaging password to sign in.


Managing Online Pictures From Your Phone

You can use your phone to manage, edit, or share pictures you have uploaded to your online picture messaging account.



To view your online pictures from your phone:

1. Press  to access the main menu.
2. Select **Pictures**.
3. Select **Online Albums**.
4. Select **View Albums**. (Depending on your settings you may be prompted to accept an Internet connection.)
5. Highlight an album title and press  to display thumbnail images.

Tip: To switch a selected picture from thumbnail view to expand view mode, press  (right softkey) and select **Expand**.


6. Use your navigation key to select a picture.
7. Press  (right softkey) to display your online picture options.

Uploading Pictures

1. Press  to access the main menu.
2. Select **Pictures**.
3. Select **My Pictures**.
4. Select **In Camera**.
5. Select the picture(s) you wish to upload and press  (right softkey).
6. Select **Upload**.
7. Select **This**, **Selected**, or **All**.
8. Select **"Uploads" Area**.
 - or –
 - Select **Other Albums**, and then select your desired album.

Downloading Your Online Pictures

From your online picture messaging account, you can select pictures to download to your phone's folder.

1. From the online pictures display, select the picture you wish to download and press  (right softkey). (See "Managing Online Pictures From Your Phone" on page 114.)
2. Select **Save to Phone**.
3. Select one of the following options:
 - ▶ **Set as** to assign the picture (**Picture ID**, **Incoming Calls**, or **Screen Saver**).
 - ▶ **Download Only** to download the picture to the In Camera folder.

Accessing Online Picture Options From Your Phone

To access your online Picture options from your mobile phone:

1. Select a picture from your Online Albums (see “Managing Online Pictures From Your Phone” on page 114).
2. Press **Options** (right softkey) to display options.
3. Select an option.
 - ▶ **Expand** to switch to the Expand view mode.
 - ▶ **Thumbnail** to switch to the Thumbnail view mode.
 - ▶ **Copy/Move** to copy or move pictures to a selected album.
 - ▶ **Details/Edit** to display the details of currently highlighted picture or edit the picture.
 - ▶ **Delete** to erase pictures saved in the current album (or Uploads folder).
 - ▶ **Save to Phone** to select **Set as** to assign pictures to phone tasks or **Download Only** to download the pictures to the In Camera folder.
 - ▶ **Create Album** to create a new album (from Uploads folder only).
 - ▶ **Online Albums** to switch the display to the online album list.


Note: The online picture messaging options may vary depending on the item you select.

12. Using Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets, hands-free car kits, and Bluetooth enabled handhelds, PCs, and wireless phones. The Bluetooth communication range is usually up to approximately 10 meters (30 feet).

Accessing the Bluetooth Menu

To access the Bluetooth menu:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Bluetooth**.

Turning Bluetooth On and Off

By default, your phone's Bluetooth feature is turned off. Turning Bluetooth on makes your phone "available" to other in-range Bluetooth devices. To make your phone visible to other devices you must also set your phone's visibility to other than **Hidden**. (See page 119.)

To turn Bluetooth on:

1. From the Bluetooth menu display, select **Enable/Disable**.
2. Select **Enable** to enable Bluetooth.




To turn Bluetooth off:

1. From the Bluetooth menu display, select **Enable/Disable**.
2. Select **Disable** to disable Bluetooth.

Note: Enabling the Bluetooth settings affect the battery's talk and standby times.

Bluetooth Status Indicators

The following icons show your Bluetooth connection status at a glance:

- ▶  – Bluetooth feature is active. It turns to green when connected to a Bluetooth device.
- ▶  – Your phone is discoverable by another Bluetooth device.
- ▶  – Your phone is communicating with a Bluetooth device.

Using the Bluetooth Settings Menu

The **Bluetooth Settings** menu allows you to set up many of the characteristics of your phone's Bluetooth service, including:

- ▶ Entering or changing the name your phone uses for Bluetooth communication
- ▶ Setting your phone's visibility (or "discoverability") for other Bluetooth devices
- ▶ Displaying your phone's Bluetooth device address



To access the Bluetooth Settings menu:

- ▶ From the Bluetooth menu display, use the navigation key to select **Enable/Disable**, **Visibility**, **Voice Priority**, **Permissions**, **My Device Name**, or **My Device Info**.

Bluetooth Settings: My Bluetooth Name

The **My Device Name** section of the Bluetooth Settings menu allows you to select a Bluetooth name for your phone. Your phone's Bluetooth name will appear to other in-range Bluetooth devices, depending on your Visibility settings.

To set a Bluetooth name for your phone:

1. From the Bluetooth menu display, select **My Device Name**.
2. Press and hold  to clear the current name.
3. Use your keypad to enter a new name and press  to save and exit.

Bluetooth Settings: My Bluetooth Information


To display your phone's Bluetooth Information:

- ▶ From the Bluetooth menu display, select **My Device Info**.

Bluetooth Settings: Visibility

The **Visibility** section of the Bluetooth Settings menu allows you to manage your phone's availability to other Bluetooth devices.

To configure your phone's visibility (discoverability) to other Bluetooth devices:

1. From the Bluetooth menu display, select **Visibility**.
2. Select a Visibility setting and press :
 - ▶ **Always Visible** to allow other Bluetooth devices to detect and identify your phone.
 - ▶ **Visible for 3 min.** to allow other Bluetooth devices to detect your phone for 3 minutes, after which it returns to hidden mode.
 - ▶ **Hidden** to prevent other Bluetooth devices from detecting and identifying your phone.

Note: It is recommended that your phone is in standby mode when receiving data from other devices via Bluetooth.

Bluetooth Settings: Voice Priority

The **Voice Priority** section of the Bluetooth Settings menu allows you to choose the default device you want to use for incoming and outgoing calls.


To set the voice priority:

1. From the Bluetooth menu display, select **Voice Priority**.
2. Select **Phone** or **Hands-free**.
 - ▶ **Phone** allows you to switch the audio between your phone and hands-free devices.
 - ▶ **Hands-free** allows only hands-free devices to be used.

Bluetooth Settings: Permissions

The **Permissions** section of the Bluetooth Settings menu allows you to configure your phone's accessibility to other Bluetooth devices.

To configure your phone's accessibility to other Bluetooth devices:

1. From the Bluetooth menu display, select **Permissions**.
2. Select **Hands-free**, **Dial-up Networking**, or **Object Push**.
3. Select a setting and press :
 - ▶ **Always Allow** allows other Bluetooth devices to initiate a connection without any confirmation.
 - ▶ **Ask** displays a confirmation screen, from which you can accept or deny the connection.
 - ▶ **Never Allow** denies the connection attempt.

Bluetooth Profiles

All the Bluetooth settings you configure are stored in your phone's Bluetooth user profile. Different profiles can be used for specific Bluetooth functions.




- ▶ **Headset Profile** – This profile functions as a wireless ear jack. When an incoming call is received, the ringer can be heard through the headset. The call can then be received by pushing a button. While using your phone, you can use the headset instead of the phone by pushing a button on the headset, which has the same effect as inserting a jack into the phone. Increase or decrease the volume by using the volume key on the side of the phone.
- ▶ **Hands-Free Profile** – This profile functions as a wireless car kit. Incoming calls ring to the hands-free headset or device. Calls can be received by pressing a button on the headset or device. For dialing, four functions are supported: recent call dial, voice dial, speed dial, and number dial. Increase or decrease the volume by using the volume key on the side of the phone.
- ▶ **DUN: Dial-Up Network Profile** – This profile functions as a wireless data cable, connecting a PC or PDA to a network through your phone.
- ▶ **OPP: Object Push Profile** – This profile uses the Generic Object Exchange profile services to send data objects between devices and can be used to exchange business cards (vCard).

Pairing Bluetooth Devices

Paired Devices

The Bluetooth pairing process allows you to establish trusted connections between your phone and another Bluetooth device. When devices are paired, a passcode (PIN Code) is shared between devices, allowing for fast, secure connections while bypassing the discovery and authentication process.

To pair your phone with another Bluetooth device:

 
1. Press  to access the main menu.
2. Select **Tools**.
3. Select **Bluetooth**.
4. Select **<Add New>**.
5. Select **Search**. (Your phone will display a list of discovered in-range Bluetooth devices.)
6. Select the device you wish to pair with and press .
7. Select **Add to Trusted**.
8. Enter the passcode and press . (When the owner of the other device enters the same code, the pairing is complete.)

Note: Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible.

Waiting for Request

If you are going to be using a Dial-Up Network (DUN) profile to pair with a PC or PDA, you will need to allow the other device to initiate pairing with your phone.

To allow your phone to be paired with another Bluetooth device:

1. Follow steps 1-4 above.
2. Select **Wait for Request**.
3. Follow the onscreen prompts to enter your passcode and press .

Using the Trusted Devices Options

Once you have created paired devices, several options are available from the trusted devices list.

To use the trusted devices options:





1. From the trusted devices list, select a device.
2. Press **Options** (right softkey) to display the following options:
 - ▶ **Connect** to connect to the Bluetooth device (if applicable).
 - ▶ **Send Item** to send an item saved on your phone to another Bluetooth device.
 - ▶ **Edit Name** to edit the name of the trusted device.
 - ▶ **Device Info** to display the trusted device's information.
 - ▶ **Sort by** to sort the trusted devices.
 - ▶ **Delete** to delete the selected device from the list.
 - ▶ **Delete All** to delete all devices from the list.
 - ▶ **Settings** to display the Bluetooth settings menu. (See page 118.)

Sending Data via Bluetooth

You can send Business Card or Contacts data saved on your phone using Bluetooth technology.

Sending an Item



To send an item:

1. Press  to access the main menu.
2. Select **Tools**.
3. Select **Bluetooth**.
4. Select the device from the trusted devices list and press  (right softkey).
5. Select **Send Item**.
6. Select your desired item (**Business Card** or **Contacts**) and press .
- ▶ To send a contact, select a contact, and then follow the onscreen instructions to complete the transfer.
7. Make sure the other device is ready to receive data, and then press  (left softkey).

Sending a Contact

You can send a Contacts entry to another Bluetooth device.

To send a contact:

1. Press the navigation key right.
2. Highlight a contact and press **Options** (right softkey).
3. Select **Send Contact**.
4. Select one of the following options and press .
- ▶ **This** to send the currently highlighted contact.
- ▶ **All** to send all contacts in your Contacts list.
5. Your phone will search for Bluetooth devices and display a list of available devices. Select the device and press .
6. Make sure the other device is ready to receive data, and then press **Send** (left softkey).

Note: Some vehicles with a built-in Bluetooth system allow you to transfer your phone's contacts to the car. If your vehicle supports this feature, follow the above steps to transfer your contacts to the vehicle's built-in Bluetooth system.


13. Service Features

Using Voicemail

All unanswered calls to your phone are automatically transferred to voicemail, even if your phone is in use or turned off.

Voicemail Notification

There are several ways your phone alerts you to new voicemail messages:

- ▶ By displaying a message on the screen.
- ▶ By playing the assigned ringer type.
- ▶ By blinking the LED.
- ▶ By displaying  at the top of your screen.

New Voicemail Message Alerts

When you receive a new voice message, your phone alerts you and prompts you to call your voicemail.


To call your voicemail:

- ▶ Press .


To display your Missed Log:

1. Press  to access the main menu.
2. Select **Missed Alerts**.


Displaying Voicemail Details

1. Press  to access the main menu.
2. Select **Messaging**.
3. Select **Voicemail**.
4. Select **Details**.

Retrieving Your Voicemail Messages


- ▶ Press and hold  **1**. (Your phone will dial your voicemail box.)

– or –

1. Press  to access the main menu.
2. Select **Messaging**.
3. Select **Voicemail**.
4. Select **Call Voicemail**.



Note: You are charged for airtime minutes when you are accessing your voicemail from your phone.

Clearing the Message Icon


1. Press  to access the main menu.
2. Select **Messaging**.
3. Select **Voicemail**.
4. Select **Clear Count**.
5. Select **Yes**.

Editing Your Voicemail Number

To edit your voicemail number:

1. Press  to access the main menu.
2. Select **Messaging**.
3. Select **Voicemail**.
4. Select **Edit Voicemail#**.
5. Edit your voicemail number and press .

To reset your voicemail number:

1. Follow steps 1-4 above.
2. Press  (right softkey).
3. Select **Reset Voicemail#**.
4. Select **Yes**.

Responding to Call Waiting

When you're on a call, Call Waiting alerts you to incoming calls by sounding beeps. Your phone's screen informs you that another call is coming in and displays the caller's phone number (if it is available and you are in digital mode).

To respond to an incoming call while you're on a call:

- ▶ Press **TALK** (or press **Options** [right softkey], select **Flash** or **Flash:Speaker**). This puts the first caller on hold and answers the second call.

To respond to an incoming call when Answer on Hold is activated:

- ▶ Press **TALK** (or press **Options** [right softkey], select **Flash** or **Flash:Speaker**). (The Answer on Hold will be automatically deactivated. See page 14 for Answer on Hold.)

To switch back to the first caller:

- ▶ Press **TALK** (or press **Options** [right softkey], select **Flash**) again.

Note: Call Waiting may not be available while roaming off the home network.

Making a Three-Way Call

With Three-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. Enter a number you wish to call and press **TALK** or **SPEAKER**.
2. Once you have established the connection, press **TALK** to put the first caller on hold.
3. Enter the second number you wish to call and press **TALK** (or press **Options** [right softkey], select **Call** or **Call:Speaker On**).
4. When you're connected to the second party, press **TALK** again (or press **Options** [right softkey], select **Flash**) to begin your three-way call.

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all three callers are disconnected.

Web

With Web on your phone, you will be able to browse full-color graphic versions – not just text versions – of your favourite website, making it easier than ever to stay informed while on the go. Check sports scores, trade stocks, and shop all on your phone.

Launching the Web

- ▶ Press **Web** (right softkey).
– or –
- 1. Press **MENU OK** to access the main menu.
- 2. Select **Web**.

Net Guard

With the Net Guard setting, the confirmation display will appear to connect to the Internet. This feature helps you avoid accidental connections. You can disable the Net Guard in the future by selecting **Always Auto-Connect** when the Net Guard is displayed.

1. Press **MENU OK** to access the main menu.
2. Select **Settings**.
3. Select **Internet**.
4. Select **Net Guard**.
5. Select **On** or **Off**.
 - ▶ **On** to make the Net Guard appear when connecting to the Internet.
 - ▶ **Off** to avoid the Net Guard when connecting to the Internet.

Note: When enabled, the Net Guard appears only once per session. The Net Guard does not appear if the phone is merely re-connecting due to a time-out.

Browsing the Web

Creating a Bookmark

Bookmarks allow you to store the address of your favourite websites for easy access at a later time.

1. Launch the Web page you want to mark.
2. Press right softkey to go to the browser menu.
3. Select **Mark this page**.
4. Press **OK** (left softkey) to save the bookmark.

Note: Bookmarking a page does not store the page contents, just its address. Some pages cannot be bookmarked. Whether a particular Web page may be marked is controlled by its creator.

Accessing a Bookmark

1. Launch the Web and press right softkey to access the browser menu.
2. Select **View Bookmarks**.
3. Select the bookmark you'd like to access to go to the website.

Editing a Bookmark

1. Launch the Web and press right softkey to access the browser menu.
2. Select **View Bookmarks**.
3. Highlight the bookmark you wish to edit and press the right softkey.
4. Select **Edit Address** or **Edit Title**.
5. Press **Edit** (right softkey), use your keypad to edit the address or title, and press **OK** (left softkey).
6. To save the bookmark, press **OK** (left softkey).

Deleting a Bookmark

1. Access **View Bookmarks** menu. (See “Accessing a Bookmark” on page 131.)
2. Highlight the bookmark you wish to erase and press right softkey.
3. Select **Delete**.
4. Press **Yes** (right softkey).

Going to a Specific Website

1. Launch the Web and press right softkey to display the browser menu.
2. Select **Go to URL....**
3. Select **Address**.
4. Use your keypad to enter the URL of the website you wish to go to, and press **OK** (left softkey).

Note: Not all websites are viewable on your phone.

Reloading a Web Page


1. Launch the Web and press right softkey to display the browser menu.
2. Select **Refresh this page**.

Sending a Web Page

This feature allows you to send a URL (Web site address) you're viewing through SMS text messaging.


1. Launch the Web and press right softkey to display the browser menu.
2. Select **Send Page**.
3. To complete and send a Web Page, follow steps 5-11 in "Sending a Text Message" on page 95.

Adjusting the Browser Sound Volume

1. Launch the Web and press right softkey to display the browser menu.
2. Select **More....**
3. Select **Preferences**.
4. Select **Sound Volume**.
5. Select your desired volume level by pressing the navigation key up or down and press .


Downloading through the Wireless Web

Your phone allows you to download images (screen savers), ringers, games, etc., from a website.

1. Press  to access the main menu.
2. Select **My Content**.
3. Select your desired data folder (for example, **Games**, **Ringers**, **Screen Savers**, or **Applications**).
4. Select **Get New** to start up the browser.
5. Select your desired image or ringer file, and follow the system prompts.

Confirming the Downloaded Data

The downloaded data will be automatically classified as games, ringers, images (screen savers) or an application folder. However, if any data has a different category, it is classified as a Dynamic folder. If data doesn't belong to any of the above categories, it is classified in the Others folder.

1. Press  to access the main menu.
2. Select **My Content**.
3. Select your desired data folder (for example, **Games**, **Ringers**, **Screen Savers**, or **Applications**).
4. Select the downloaded data you want to confirm.

Tip: The names of dynamic folders are variable depending on data.

14. Safety Guidelines

Maintaining Your Phone's Peak Performance

- ▶ Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, turn the power off and immediately remove the battery.
- ▶ To maximize performance, do not touch the bottom portion of your phone where the internal antenna is located while using the phone.

Using Your Phone While Driving

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions.

- ▶ Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.
- ▶ Do not take notes or look up phone numbers while driving.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radiofrequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems and/or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Note: Always turn off the phone in health care facilities and request permission before using the phone near medical equipment.

Turning Off Your Phone Before Flying

Turn off your phone or set your phone to Airplane mode before boarding any aircraft. To prevent possible interference with aircraft systems, Transport Canada regulations require you to have permission from a crew member to use your phone while the plane is on the ground.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn your phone off when in a blasting area or in other areas with signs indicating two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn your phone off when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone and accessories could generate sparks. Sparks can cause an explosion or fire, resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- ▶ Any area where it is very humid and with inflammables.
- ▶ Fueling areas such as gas stations.
- ▶ Below deck on boats.
- ▶ Fuel or chemical transfer or storage facilities.
- ▶ Areas where the air contains chemicals or particles such as grain, dust, or metal powders.
- ▶ Any other area where you would normally be advised to turn off your vehicle's engine.

Note: Never transport or store flammable gas, liquid or explosives in the compartment of your vehicle that contains your phone or accessories.

Restricting Children's Access to Your Phone

Your phone is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the phone or make calls that increase your telephone bill.

Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- ▶ Use only approved batteries and chargers. These chargers are designed to maximize battery life. Using other batteries or chargers voids your warranty and may cause damage.
- ▶ In order to avoid damage, charge the battery only in temperatures that range from 0° C to 45° C (32° F to 113° F).
- ▶ Don't store the battery in a high humidity environment.
- ▶ Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- ▶ Never dispose of the battery by incineration.
- ▶ Keep the metal contacts on top of the battery clean.
- ▶ Don't attempt to disassemble or short-circuit the battery.
- ▶ Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

Less than one month:

-20° C to 60° C (-4° F to 140° F)

More than one month:

-20° C to 45° C (-4° F to 113° F)

Disposal of Lithium Ion (Li-Ion) Batteries

For safe disposal options of your Li-Ion batteries, please ensure that disposal of this in accordance with law and regulation.

- ▶ Do not dispose of the battery in fire; the cell may explode.
- ▶ Do not open or puncture the battery; the released electrolyte is corrosive and may cause damage to the eyes and skin.

Special Note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Note: For safety, do not handle a damaged or leaking Li-Ion battery.

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

NetFront is the trademark or registered trademark of ACCESS Co., Ltd. in Japan and in all other countries.
Copyright (c) 1996-2006 ACCESS Co., Ltd.

This mobile telephone uses JBlend™ of Aplix Corporation. JBlend and Aplix are registered trade marks of Aplix Corporation in Japan and similar applications have been filed in other countries.

Index

A

- Abbreviated Dialing 23, 52
- Airplane Mode 46
- Alarm Clock 81
- Alert Notification 33
- Animation 36
- Answering Calls 12
- Any Key Answer 49
- Auto Answer 48

B

- Backlight 35
- Battery
 - Charging 9
 - Installing 8
 - Removing 8
- Bluetooth 117
- Bookmarks 131

C

- Calculator 83
- Calendar 74
- Call Alarm 76
- Call History 63
- Call Waiting 128
- Caller ID 29, 30
- Camera 98
- Canned Messages 42
- Contacts 66

D

- Dialing Options 12
- Display Screen Icons 5
- Display Settings 35

E

- Emergency Numbers 17

F

- Font Size 38

H

- Headset Mode 53

I

- Icon Definition 5, 80
- In-Call Options 18

K

- Key Press Echo 31
- Key Volume 32

L

- Language 25, 48, 51
- Location Settings 40
- Lock Code 55
- Lock Mode 55
- Locking Your Phone 54

M

- Making Calls 11
- Menu Diagram 61
- Menu Style 36
- Message Notification 42
- Messaging 42, 93
- My Content 134
- My Favourites 47

N

- Net Guard 130

O

- Open/Close Flip Option 49

P

- Phone (illus.) 2
- Phone Number
 - Dialing With Pauses 21
 - Displaying 10
 - Finding 20
 - Saving 20, 21
- Pictures 98

R

Resetting Your Phone 58
Restricting Calls 56
Ringer Types 29, 30
Roaming 59

S

Safety 135
Screen Call 13, 90
Screen Savers 37
Security Menu 54
Self-Timer 100, 101
Setup Options 47
Side Key Guard 11, 50
Silence All 34
Sleep Mode 39
Sound Settings 29
Special Numbers 56
Speed Dialing 22, 71
Start-up/Power-off Tone 31
Stop Watch 84

T

T9 Text Input 26
Text Messaging 94, 95
Three-Way Call 129
To Do List 78
Tone Length 30
TTY 45
Turbo Button 53
Turning On and Off 7

U

Unlocking Your Phone 54

V

Vibrate Pattern 30
Voice-Activated Dialing 85
Voice Memo 87
Voice Prompt 31
Voice Tags
 Erasing 86
 Playing 86
 Programming 86
Voicemail
 Clearing Message Icon 127
 Editing Number 127
 Notification 126
 Retrieving 127
Volume Settings 15, 32

W

Web 130
World Clock 83

Notes

[illegible]